



BLOM GLASS TABLE LAMP

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH


BLOM GLASS TABLE LAMP

PARTS INCLUDED

- (A) Bulb (1)
- (B) E26 Phenolic Ring(1)
- (C) Shade (1)
- (D) E26 Socket (1)
- (E) Glass Body (1)
- (F) Base (1)
- (G) Screw (1)

TOOLS NEEDED

Phillips Screwdriver (Not Included)

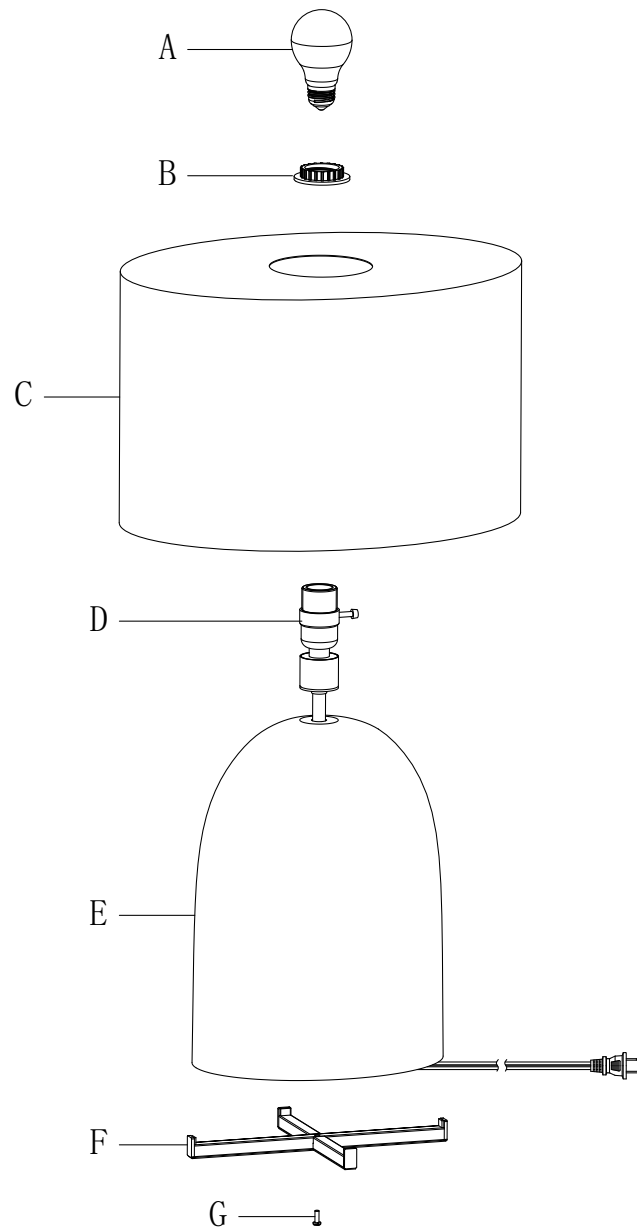

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE.

IMPORTANT SAFETY FEATURES

This product is for indoor use only.

BULBS

This lamp has been rated for one (1) 9-watt maximum Type A19 E26 LED lightbulb (included). To avoid the risk of fire, do not exceed the recommended wattage.

DIMMER SWITCH COMPATIBILITY

This lamp is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off lamp and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when lamp is illuminated. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet (1 meter) away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Place the lamp on a clean surface.
3. First, secure Base (F) and Glass Body (E) by tightening Screw (G) with a Phillips screwdriver.
4. Place Shade (C) cover on E26 Socket (D), then lock with E26 Phenolic Ring (B).
5. Insert Bulb (A) into socket.
6. Insert the plug into a power outlet.
7. Turn on the On/Off/Dimmer Switch.
8. Assembly is complete.

CARE INSTRUCTIONS

1. Wipe all surfaces with a soft, dry cloth.
2. Clean glass with a mixture of mild soap and water.
3. Do not use any harsh cleaners (including ammonia-based products) or abrasives, as they will damage the finish.

ENVIRONMENTAL PROTECTION



Discarded electric appliances are recyclable and should not be discarded in domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to collection centers.