



1920s ODEON RECTANGULAR CHANDELIER 72"

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH


1920s ODEON RECTANGULAR CHANDELIER 72"

PARTS INCLUDED

- (A) Junction Box, 50lbs./22.7kg MIN. FIXTURE RATED (not included)
- (B) Mounting Bolts (8 sets; for concrete ceiling only)
- (C) Wire Nuts (3)
- (C1) Ceiling Plate (1)
- (C2) Ceiling Box (1)
- (C3) Nut Caps (2)
- (D1) Quick Links (8mm) (2)
- (D2) Chains (8mm) (2)
- (D3) Quick Links (8mm) (2)
- (E) Fixture Body (1)
- (E1) Collars (2)
- (F) Glass Drops (214 + 7 extra)
- (G) Bulbs (17)
- (H) Safety Cable (1)

TOOLS NEEDED (NOT INCLUDED)

- Saw (1)
- Pliers (2)

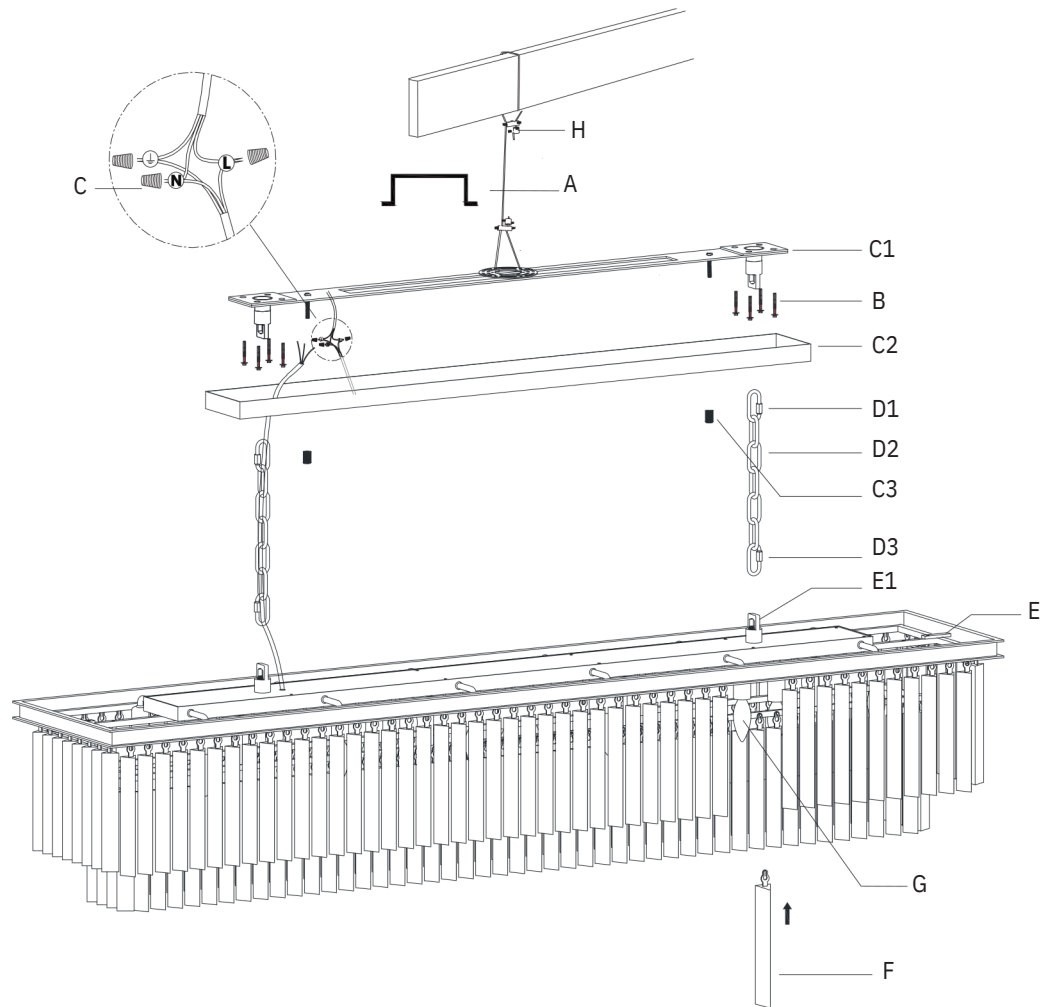

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A CONCRETE CEILING. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for 17 (seventeen) 25-watt maximum E12 TYPE B11 incandescent bulbs (not included), or 17 (seventeen) 6-watt maximum E12 TYPE B11 LED bulbs. This fixture includes 17 (seventeen) 4-watt E12 TYPE B11 LED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is not vaulted-ceiling compatible.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may be used with a forward- or reverse-phase dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs./22.7 kg or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when the fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD


Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE

1. Remove nut lockers A and B by loosening the set screws/bolts from the ceiling safety cable before installation.
2. Insert the ceiling safety cable through the nut lockers, as shown in the diagram below.
3. Fasten nut locker A with set screw/bolt.
4. Fasten nut locker B with set screw/bolt.

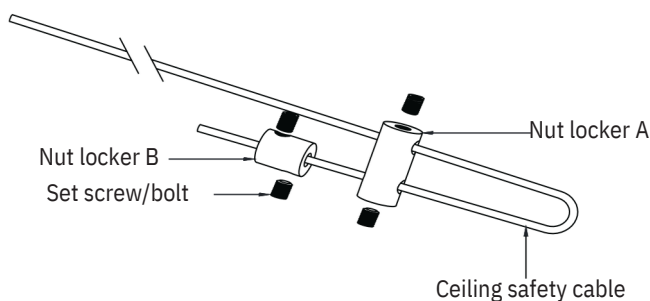

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to Junction Box (A) where the fixture will be installed.
3. Unlock Quick Links (D3) to attach Chains (D2) to Collars (E1) of Fixture Body (E).
4. Loosen Nut Caps (C3) from Ceiling Box (C2) and remove Ceiling Plate (C1) from Ceiling Box (C2).
5. Have a professional contractor reinforce the ceiling. Attach Safety Cable (H) to the ceiling beam through Junction Box (A). Then attach Safety Cable (H) to the fixed fixture on the ceiling with the nut locker. Refer to the diagram on the previous page.
6. Attach Ceiling Plate (C1) to the ceiling and secure with Mounting Bolts (B). Then attach Ceiling Box (C2) to Ceiling Plate (C1), and fasten Nut Caps (C3).
7. Feed the wires along with Chains (D2) so that they come out from the top of Chains (D2).
8. Move Fixture Body (E) up to Ceiling Plate (C1), and unlock Quick Links (D1) to attach Ceiling Plate (C1).
9. Loosen Nut Caps (C3), move Ceiling Box (C2) down from Ceiling Plate (C1), and feed the wires through Ceiling Box (C2).
10. Carefully inspect the fixture wires. One is the ground wire (marked with $\oplus$). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
11. Connect the fixture ground wire to the power supply ground wire with a Wire Nut (C).
NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
12. Connect the fixture neutral wire to the power supply neutral wire with a Wire Nut (C).
13. Connect the fixture live/hot wire to the power supply live/hot wire with a Wire Nut (C).
CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
14. Move Ceiling Box (C2) up to the ceiling, then fasten Nut Caps (C3).
15. Fasten Bulbs (G) into the fixture sockets.
16. Hang Glass Drops (F) starting from the inner drops to the outer drops. To ensure the balance of Fixture Body (E) during Glass Drops (F) installation, please hang Glass Drops (F) in a balanced way on the opposite side.
17. Restore power to Junction Box (A) and test the fixture.
18. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Using a Saw (not included), saw through the chain along a weld line.

Then use 2 (two) pairs of Pliers (not included) to gently pry the links apart along a split-line formed in each link so that a space is created large enough for the link to be removed from the remaining chain. See diagrams 1, 2, and 3.

NOTE:

- The chain length may be shortened from either end.
- Use a clean cloth or a folded piece of paper between the Pliers and the link to protect the finish of the link during the chain bending.

2. Once the chain is at the desired length, install the chain gently with the quick link, as shown in diagram 4.

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

