



1920s ODEON ROUND CHANDELIER 32"

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH


1920s ODEON ROUND CHANDELIER 32"

PARTS INCLUDED

- (A) Wooden Beam (not included)
- (B) Mounting Hardware (2 sets; for wooden beam only)
- (C) Wire Nuts (3)
- (C1) Mounting Plate (1)
- (C2) Quick Link (8mm) (1)
- (C3) Hang Straight (1)
- (C4) Canopy (1)
- (C5) Collar (1)
- (C6) Set Bolt (1)
- (D1) Junction Box, 50lbs. (22.7 kg) MIN. FIXTURE RATED (not included)
- (D2) Ceiling Plate (1)
- (D3) Mounting Bolts (8 sets; for concrete ceiling only)
- (D4) Ceiling Box (1)
- (D5) Nut Caps (2)
- (E1) Quick Link (6mm) (2)
- (E2) Chain (6mm) (1)
- (E3) Quick Link (6mm) (1)
- (F) Fixture Body (1)
- (F1) Set Bolt (1)
- (G) Glass Drops (205 + 6 extra)
- (H) Bulbs (17)
- (I) Hang Straight (1)
- (J) Safety Cable (1)

TOOLS NEEDED (NOT INCLUDED)

- Saw (1)
- Pliers (2)

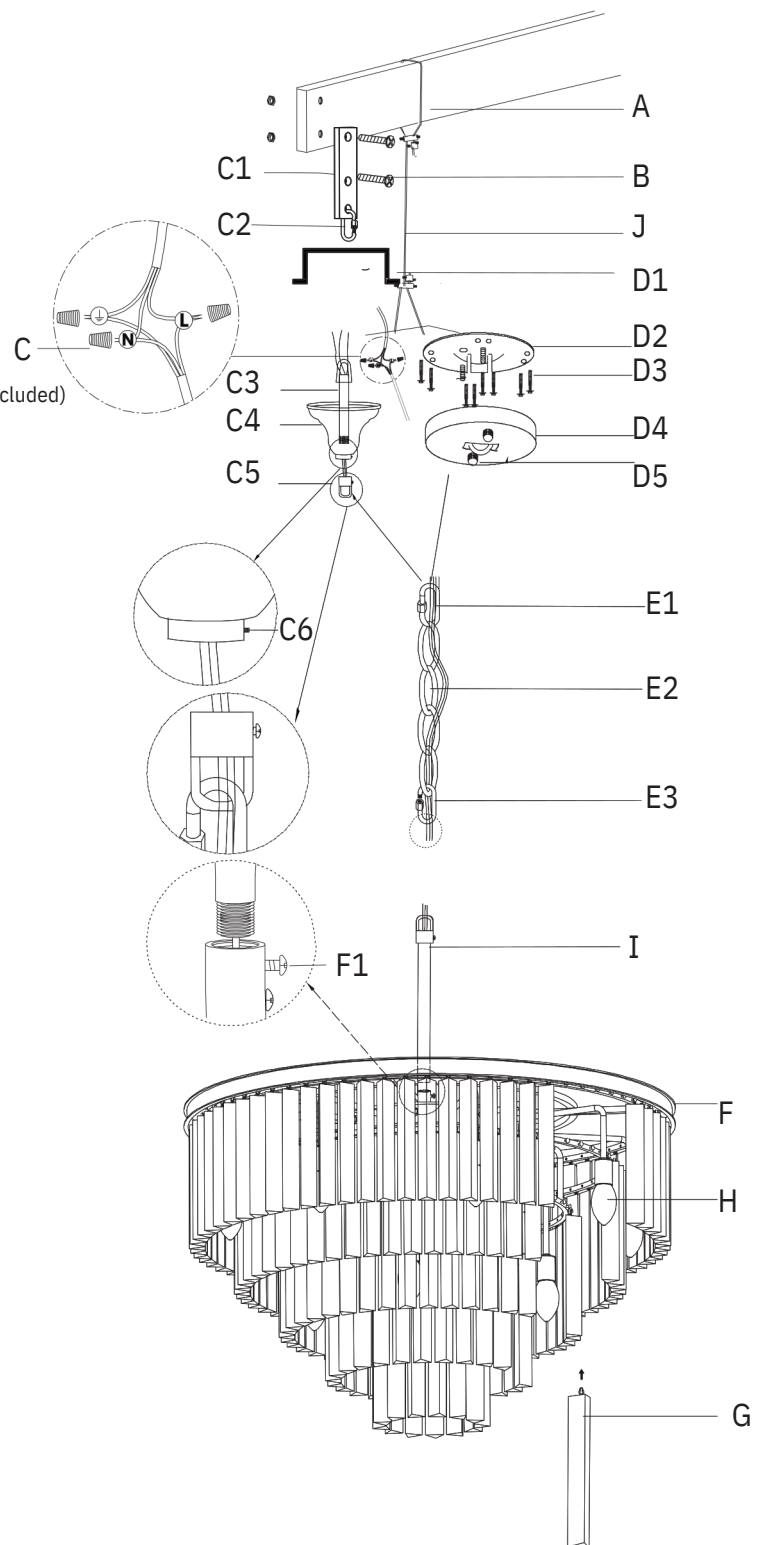

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A WOODEN BEAM (FOR HANGING SYSTEM A) OR A CONCRETE CEILING (FOR HANGING SYSTEM B). UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for 17 (seventeen) 25-watt maximum E12 TYPE B11 incandescent bulbs (not included), or 17 (seventeen) 6-watt maximum E12 TYPE B11 LED bulbs. This fixture includes 17 (seventeen) 4-watt E12 TYPE B11 LED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture, when using Hanging System A, is not vaulted-ceiling compatible.

This fixture, when using Hanging System B, is vaulted-ceiling compatible, up to a maximum ceiling slope of 15 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may be used with a forward-phase or reverse-phase dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs./22.7 kg or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when the fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD


Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE

1. Remove nut lockers A and B by loosening the set screws/bolts from the ceiling safety cable before installation.
2. Insert the ceiling safety cable through the nut lockers, as shown in the diagram below.
3. Fasten nut locker A with set screw/bolt.
4. Fasten nut locker B with set screw/bolt.

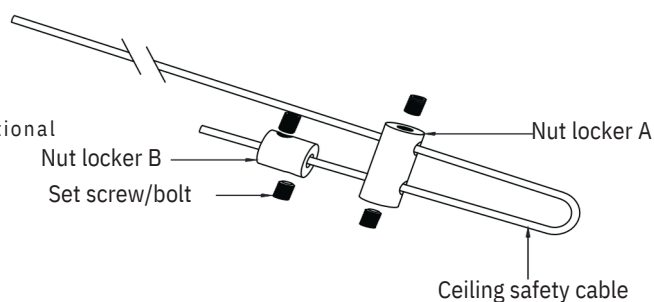

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to Junction Box (D1) where the fixture will be installed.
3. The implementation of the hanging system depends on whether the ceiling is vaulted or level.
Hanging System A is for a level ceiling, which includes
4. Mounting Hardware (B), Mounting Plate (C1), Quick Link (C2), Hang Straight (C3), Canopy (C4), and Collar (C5). Loosen Set Bolt (C6) and remove Collar (C5) from Hang Straight (C3). Insert Hang Straight (C3) through Canopy (C4), and reattach Hang Straight (C3) to Collar (C5). Secure with Set Bolt (C6).
Hanging System B is for a vaulted and level ceiling, which includes Ceiling Plate (D2), Mounting Bolts (D3), Ceiling Box (D4), and Nut Caps (D5). Loosen Nut Caps (D5) and remove Ceiling Plate (D2) from Ceiling Box (D4).
Fasten Hang Straight (I) to Fixture Body (F) and secure with Set Bolt (F1).
5. Attach Chain (E2) to Hang Straight (I) with Quick Link (E3).
Have a professional contractor reinforce the ceiling. Attach Safety Cable (J) to the ceiling beam through Junction Box (D1), then
6. attach Safety Cable (J) to the fixed fixture on the ceiling with the nut locker.
7. Hanging System A: Attach Mounting Plate (C1) to Wooden Beam (A) with Mounting Hardware (B). Attach Hang Straight (C3) to Mounting Plate (C1) with Quick Link (C2).
8. Hanging System B: Attach Ceiling Plate (D2) to the ceiling with Mounting Bolts (D3).
Move Fixture Body (F) up to Hang Straight (C3) or Ceiling Plate (D2), and then attach Quick Link (E1) to Hang Straight (C3) or Ceiling Plate (D2).
9. Loosen Set Bolt (C6) or Nut Caps (D5), then move Canopy (C4) or Ceiling Box (D4) down from the ceiling and feed the wires through Hang Straight (C3) or Ceiling Box (D4).
10. Carefully inspect the fixture wires. One is the ground wire
11. (marked with ⊕). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
12. Connect the fixture ground wire to the power supply ground wire with a Wire Nut (C).
NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
Connect the fixture neutral wire to the power supply neutral wire
13. with a Wire Nut (C).
Connect the fixture live/hot wire to the power supply live/hot wire
14. with a Wire Nut (C).

CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

17. Move Canopy (C4) or Ceiling Box (D4) up to the ceiling, then fasten Set Bolt (C6) or Nut Caps (D5).
18. Fasten Bulbs (H) into the fixture holders.
19. Hang Glass Drops (G) starting from the inner drops to the outer drops. To ensure the balance of the fixture body during Glass Drops (G) installation, hang Glass Drops (G) in balanced way on the opposite side.
Restore power to Junction Box (D1) and test the fixture.
20. Assembly is complete.
- 21.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.
Wipe clean with a soft, dry cloth.

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Using a Saw (not included), saw through the chain along a weld line.

Then use 2 (two) pairs of Pliers (not included) to gently pry the links apart along a split-line formed in each link so that a space is created large enough for the link to be removed from the remaining chain. See diagrams 1, 2, and 3.

NOTE:

- The chain length may be shortened from either end.
 - Use a clean cloth or a folded piece of paper between the Pliers and the link to protect the finish of the link during the chain bending.
2. Once the chain is at the desired length, install the chain gently with the quick link, as shown in diagram 4.

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

