



19TH C. ENGLISH OPENWORK OUTDOOR PENDANT 17"

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH

 
19TH C. ENGLISH OPENWORK OUTDOOR PENDANT
17"

PARTS INCLUDED

- (A) Wire Nut (3)
- (B) Crossbar (1)
- (C) Mounting Screws (2)
- (D) Ceiling Loop (1)
- (E) Canopy (1)
- (F) Lock Collar (1)
- (G) Chain (1)
- (H) Carabiners (2)
- (I) Top Ring (1)
- (J) Fixture Body (1)
- (K) Center Tube (1)
- (L) Short Metal Bars (4)
- (M) Long Metal Bars (4)
- (N) Screws (16)
- (O) Phillips Screwdriver (1)
- (P) Bulbs (4)
- (Q) Top Glass Panels (4)
- (R) Side Glass Panels (4)

TOOLS NEEDED

Chain Pliers (not included)

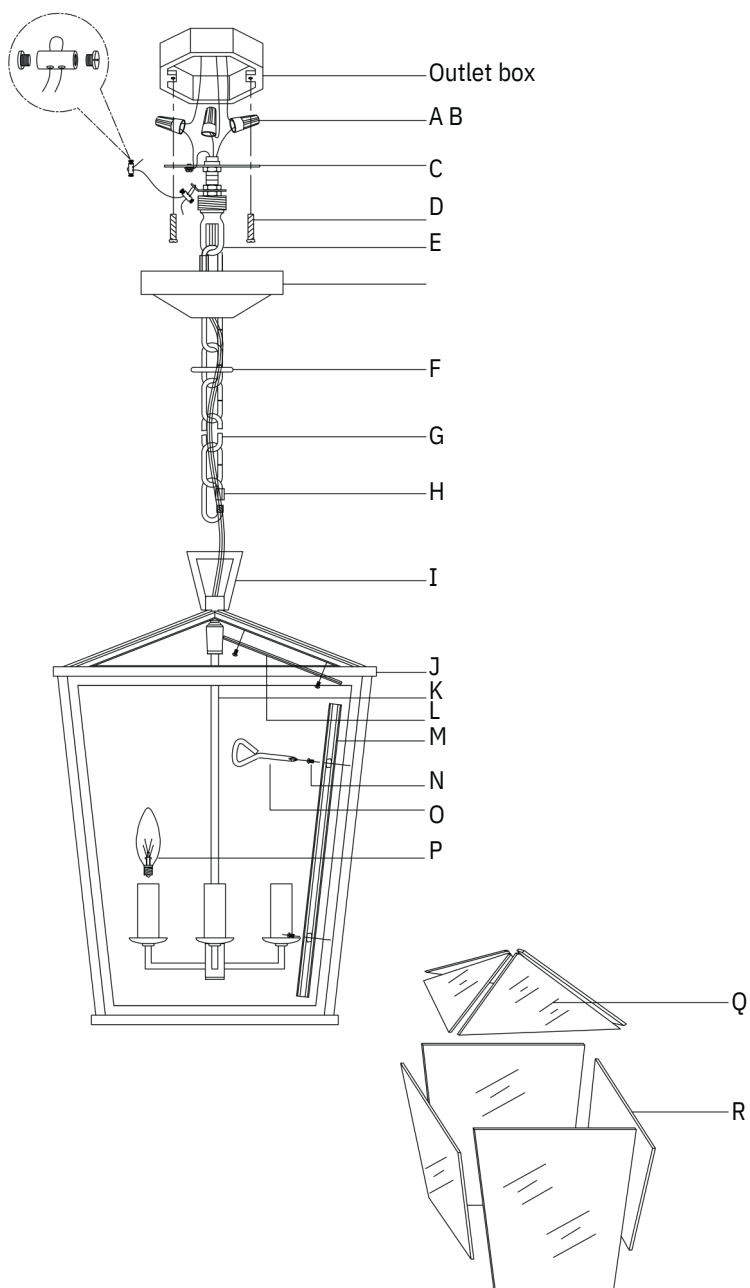

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE, OR ALTERNATIVE, INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES**BULBS**

This fixture has been rated for up to 4 (four) 60-watt E12 Type B candelabra bulbs (not included), or 4 (four) 5-watt LED lightbulbs (not included). This fixture includes 4 (four) 40-watt E12 Type B candelabra bulbs. To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

 
 
All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when the fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age. THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE

1. Run the safety cable through the outlet box and around a structural member of the building.
2. Wrap the safety cables around the cable lock nut.
3. Insert screws into both holes on the cable lock nut, and secure screws with screwdriver.

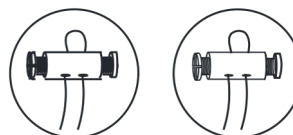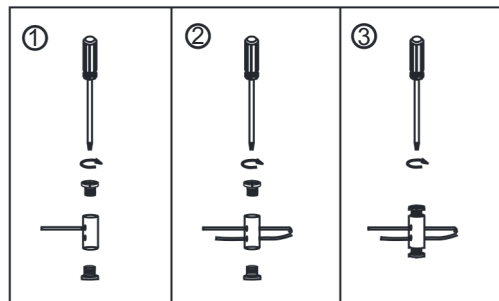

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Connect the fixture safety cable to the ceiling safety cable, then wrap both safety cables around the cable lock nut. (Refer to the diagram in previous page.)
3. Install Crossbar (B) with Ceiling Loop (D) to the ceiling outlet box by using Mounting Screws (C).
4. Place Fixture Body (J) upside down on a table. Then remove Short Metal Bars (L) and Long Metal Bars (M) from Fixture Body (J) by loosening Screws (N) using Phillips Screwdriver (O).
5. Install Top Glass Panels (Q) and Side Glass Panels (R) to Fixture Body (J). Secure with Short Metal Bars (L), Long Metal Bars (M), and Screws (N) using Phillips Screwdriver (O). DO NOT OVERTIGHTEN SCREWS.
6. Attach Center Tube (K) to Fixture Body (J).
7. Install Bulbs (P) into each of the sockets.
8. Unscrew the threaded collar on a Carabiner (H) and attach it to Top Ring (I). Close the threaded collar to secure Fixture Body (J).
9. Let Canopy (E) and Lock Collar (F) go through Chain (G).
10. With the fixture dimension as a guide, shorten Chain (G) as needed using a pair of chain pliers (not included).
11. Unscrew the threaded collar on the other Carabiner (H), raise the fixture, then attach Carabiner (H) to Ceiling Loop (D). Close the threaded collar to secure.
12. Unwrap the wiring from the top of Fixture Body (J). Weave the power supply cord and the ground wire through Chain (G).
13. When you reach Canopy (E) and Ceiling Loop (D), measure the wires and then cut. Leave enough wire to connect to the inside of the outlet box.
14. Strip the insulation back on the 2 (two) power supply wires about 5/8".
15. Twist the power supply and ground wire together, and push through the center hole of Ceiling Loop (D).
16. Connect the fixture ground (bare) wire with the ground wire from the outlet box using a Wire Nut (A). If your home does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THIS FIXTURE IS PROPERLY GROUNDED.
17. Connect the fixture neutral wire (ribbed, no markings) with the neutral wire from the outlet box using a Wire Nut (A).
18. Connect the fixture hot wire (smooth edge, markings) with the hot wire from the outlet box using a Wire Nut (A). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
19. Tuck these wire connections neatly into the outlet box to secure.
20. Place Canopy (E) onto Ceiling Loop (D) and secure with Lock Collar (F).
21. Installation is complete, turn on power at the fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.