


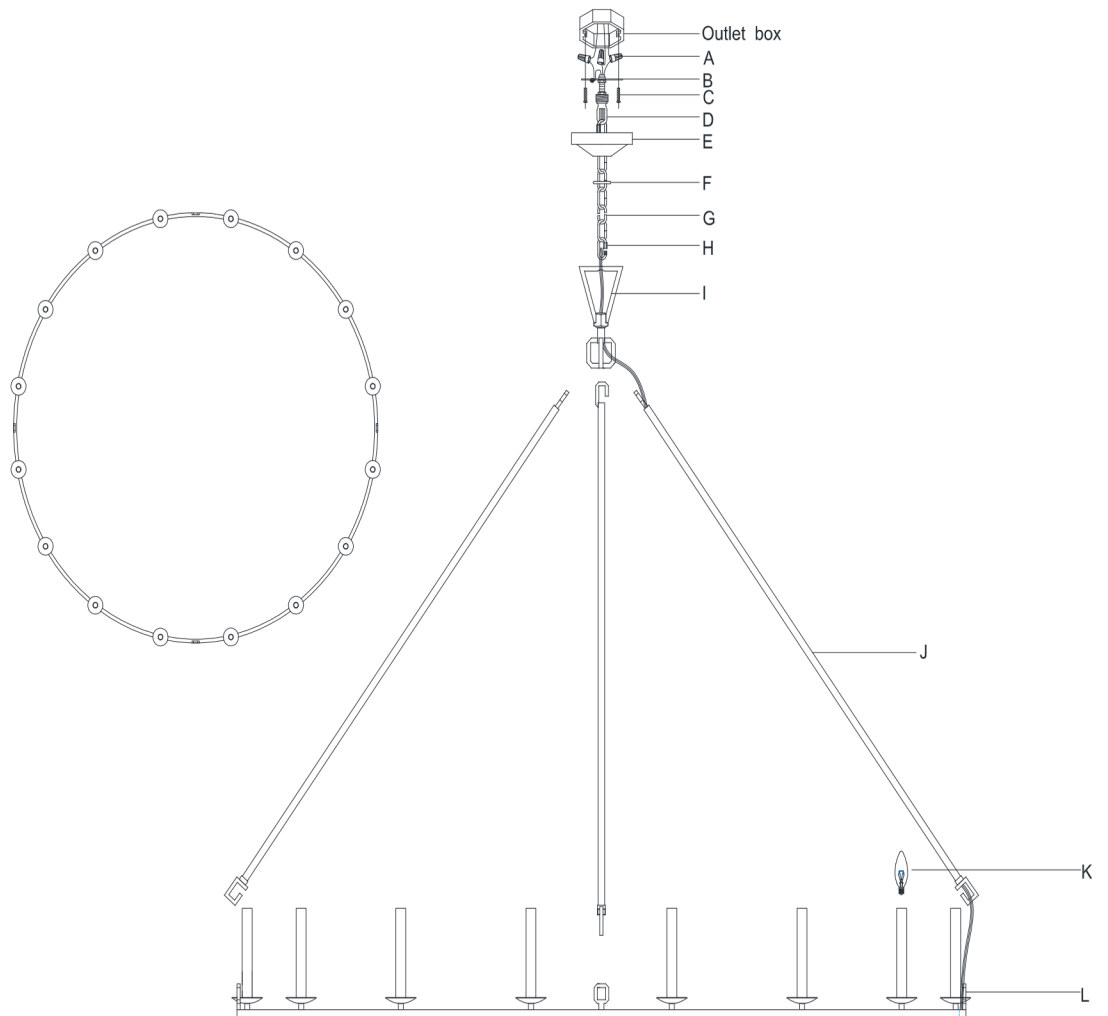

19TH C. ENGLISH OPENWORK ROUND CHANDELIER 72"

PARTS ENCLOSED

- (A) Wire Nuts (3)
- (B) Crossbar (1)
- (C) Mounting Screws (2)
- (D) Ceiling Loop (1)
- (E) Canopy (1)
- (F) Lock Collar (1)
- (G) Chain (1)
- (H) Carabiners (2)
- (I) Top Ring (1)
- (J) Arms (4)
- (K) Bulbs (16)
- (L) Hanging Ring (4)



19TH C. ENGLISH OPENWORK ROUND CHANDELIER 72"

IMPORTANT SAFETY INSTRUCTIONS

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

This fixture has been rated for up to sixteen (16) 40-Watt E12 Type B candelabra lightbulbs (included), sixteen (16) 9-Watt compact fluorescent lightbulbs (not included) or sixteen (16) 5-Watt LED lightbulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

ASSEMBLY & INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Install the Crossbar (B) with Ceiling Loop (D) to the outlet box using Mounting Screws (C).
3. Attach the Arms (J) from one end to the Hanging Ring (L) on the fixture body and the other end to the Top Ring (I).

ASSEMBLY & INSTALLATION CONT.

4. Unscrew the threaded collar on the Carabiners (H) and attach it to the Top Ring (J). Close the threaded collar to secure the fixture.
5. Let Canopy (E) and Lock Collar (F) go through the Chain (G).
6. With the fixture dimension as a guide, shorten the Chain (G) as needed using a pair of chain pliers.
7. Unscrew the threaded collar on the other Carabiners (H). Raise the fixture and attach Carabiners (H) to the Ceiling Loop (D), then close the threaded collar to secure.
8. Unwrap the wiring from the top of the fixture body. Weave the power supply cord and the ground wire through the Chain (G).
9. When you reach the Canopy (E) and Ceiling Loop (D), measure the wires and cut. Be sure to leave enough wire to connect inside of the outlet box.
10. Strip the insulation back on the two power supply wires about 5/8".
11. Twist the power supply and ground wires together and push through the center hole of the Ceiling Loop (D).
12. Connect the fixture ground (bare) wire with the ground wire from the outlet box using Wire Nuts (A). If your house does not have a ground wire, then attach this wire to the green grounding screw inside of the outlet box. IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
13. Connect the fixture neutral (ribbed, no markings) wire with the neutral wire from the outlet box using Wire Nuts (A).
14. Connect the fixture hot (smooth, edge markings) wire with the hot wire from the outlet box using Wire Nut (A). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
15. Tuck the wire connections neatly into the outlet box to secure.
16. Attach Canopy (E) to Ceiling Loop (D), then secure with Lock Collar (F).
17. Insert Bulbs (K) into each socket.
18. Installation is complete turn on power at fuse or circuit breaker.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.