



19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 33"
ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH

19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 33" ENGLISH


19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 33"

PARTS INCLUDED:

- (A) Junction Box, 50lbs/22.7kg MIN. FIXTURE RATED (not included)
- (B1) Mounting Bolts for hanging system A (2 pcs #8-32; for junction box only)
- (B2) Mounting Bolts for hanging system B (2 sets M6; for concrete ceiling only)
- (C) Wire Nuts (3)
- (C1) Mounting Plate (1)
- (C2) Canopy (1)
- (C3) Set Bolt (1)
- (C4) Hang Straight (1)
- (C5) Collar (1)
- (C6) Set Bolt (1)
- (D1) Ceiling Plate (1)
- (D2) Ceiling Box (1)
- (D3) Nut Caps (2)
- (E1) Quick Link #1 (5 mm) (1)
- (E2) Chain (5 mm) (1)
- (E3) Quick Link #2 (5 mm) (1)
- (E4) Quick Link #3 (5 mm) (1)
- (F) Fixture Body (1)
- (F1) Collar (1)
- (G) Glass Vase (1)
- (H) Bulbs (18 +6 extra)
- (I) Safety Cable (1)
- (J) Candle Sleeves (18)
- (K) Hang Straight (1)
- (L) Nut (1)
- (M) Washer (1)
- (N) Metal Knob (1)

HARDWARE NEEDED

- Saw (not included)
- Pliers (2) (not included)

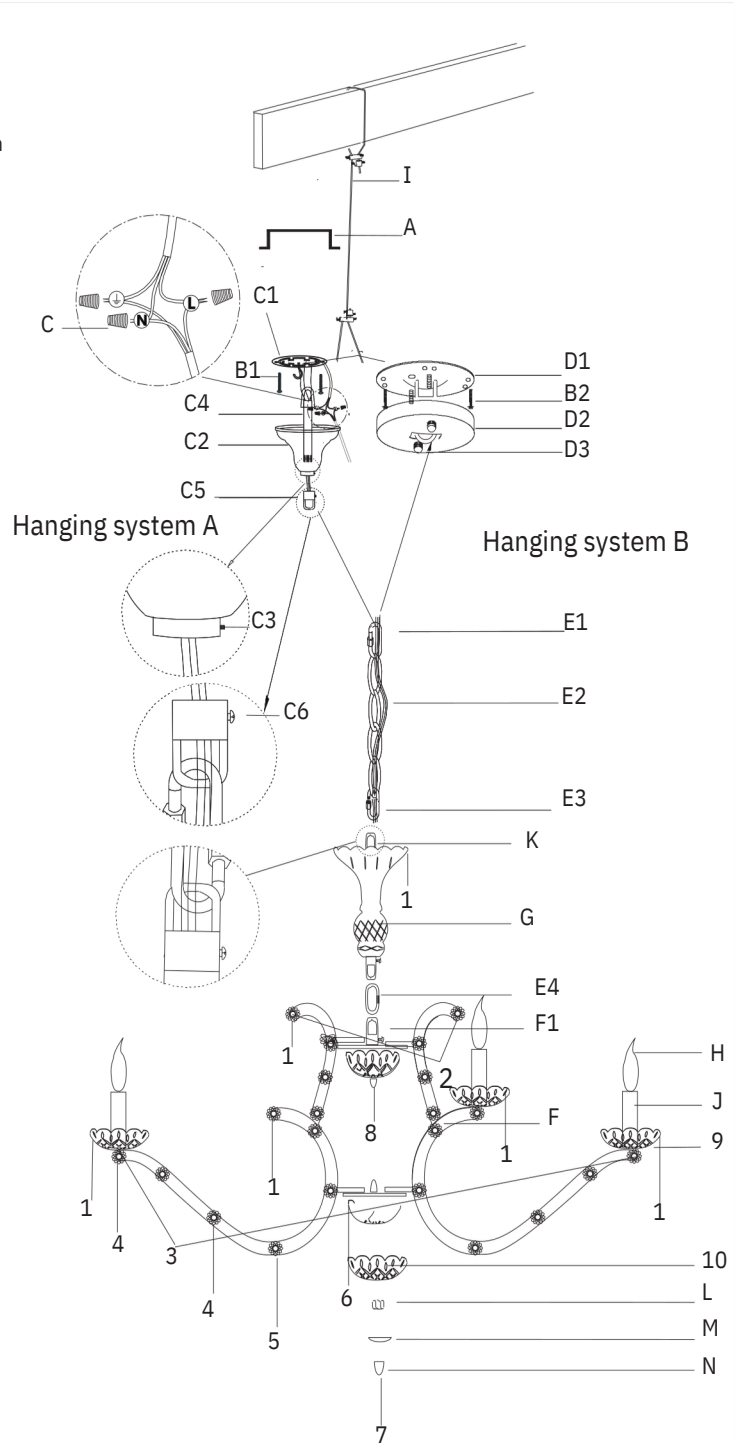

1	2	3	4	5	6	7	8	9
14mmX1pc	14mmX9pc	14mmX11pc	14mmX1pc	14mmX2pc	14mmX8pc	14mmX7pc	14mmX1pc	
50X38mm		63X43mm	63X43mm	63X43mm	63X43mm	40mm	40mm	18 PCS
90 PCS	6 PCS	12 PCS	24 PCS	12 PCS	6 PCS	1 PC	1 PC	10
								1 PC

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO JUNCTION BOX (FOR HANGING SYSTEM A) OR CONCRETE CEILING (FOR HANGING SYSTEM B). UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for eighteen (18) 6-watt maximum E12 TYPE CA11 LED bulbs (not included) or eighteen (18) 25-watt maximum E12 TYPE CA11 incandescent bulbs (eighteen 25-watt E12 TYPE CA11 incandescent bulbs included). To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture, when fixed with hanging system A, is not vaulted-ceiling compatible.

This fixture, when fixed with hanging system B, is vaulted-ceiling compatible up to a maximum ceiling slope of 15 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible and may be used with a forward or reverse-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.

WARNING: STRANGULATION HAZARD


Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE

1. Remove the nut locker A & B by loosening the set screw from the ceiling safety cable before installation.
2. Insert the ceiling safety cable through the nut lockers as the drawing shows.
3. Fasten the nut locker A with set screw/bolt.
4. Fasten the nut locker B with set screw/bolt.

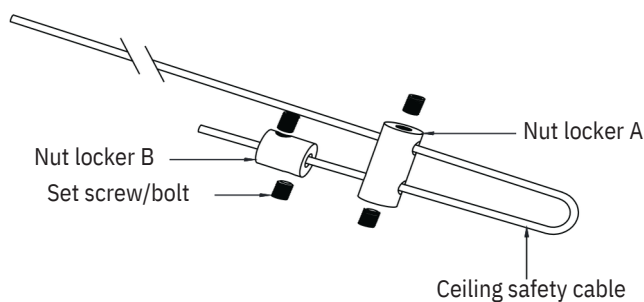

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to junction box (A) where the fixture will be installed.
3. The implementation of hanging system A or B depends on whether the ceiling is vaulted or level.
Hanging system A is for a level ceiling and includes mounting bolts (B1), mounting plate (C1), canopy (C2), set bolt (C3), hang straight (C4), collar (C5) and set bolt (C6). Loosen the set bolt (C6) and remove collar (C5) from hang straight (C4). Insert the hang straight (C4) through canopy (C2), then reattach hang straight (C4) to collar (C5) and secure with set bolt (C6).
5. Hanging system B is for vaulted and level ceilings and includes ceiling plate (D1), mounting bolts (B2), ceiling box (D2) and nut caps (D3). Loosen the nut caps (D3) and remove the ceiling plate (D1) from the ceiling box (D2).
Unlock quick link #2 (E3) on the opposite end of chain (E2) and attach to hang straight (K) on glass vase (G).
Unlock quick link #3 (E4) on the opposite end of glass vase (G) and attach to collar (F1) on fixture body (F).
Have a professional contractor reinforce ceiling. Attach safety cable (I) to ceiling beam through junction box (A), then attach the safety cable to the fixed fixture on the ceiling with the nut locker.
6. Hanging system A: Attach mounting plate (C1) to junction box (A) with mounting bolts (B1). Hang the hang straight (C4) to the hook of mounting plate (C1).
9. Hanging system B: Attach ceiling plate (D1) to the ceiling with mounting bolts (B2).
10. Move fixture body (F) up to hang straight (C4) or ceiling plate (D2), attach chain (E2) to collar (C5) or ceiling plate (D2) with quick link #1 (E1).
11. Move canopy (C2) or ceiling box (D2) down from the ceiling and feed the wires through hang straight (C4) or ceiling box (D2).
12. Carefully inspect the fixture wires. One is the ground wire (marked with ). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
13. with ). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
14. Connect the fixture ground wire to the power supply ground wire with wire nut (C).
NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
15. Connect the fixture neutral wire to the power supply neutral wire with wire nut (C).
16. Connect the fixture live/hot wire to the power supply live/hot wire with wire nut (C).
CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, AS SAFETY WILL BE COMPROMISED.
Move the canopy (C2) or ceiling box (D2) up to the ceiling, then
17. fasten the set bolt (C3) or nut caps (D3).
18. Loosen metal knob (N) and detach washer (M) from fixture body (F), then loosen the nut (L) and detach from the fixture body.
19. Fix glass bowl (10) onto fixture body (F) and secure with nut (L).
20. Re-attach washer (M) to fixture body (F) and secure with metal knob (N).
21. Fix the glass dishes (9) and candle sleeves (J) onto body (F) and hang the remaining glass drops (1-8) as per the illustration next to the Parts Included list on Page 2.
22. Fasten light bulbs (H) to the lampholders.
23. Restore power to the junction box and test fixture.
24. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.



HEIGHT ADJUSTMENT INSTRUCTIONS

1. Saw through the chain along a weld line, then use two pairs of pliers to gently pry the links apart along a split-line formed in each link so that a space is created large enough for the link to be removed from the remaining chain. See diagram 1, 2 & 3.

NOTE:

- a. The chain length may be shortened from either end.
- b. Use a clean cloth or a folded piece of paper between the pliers and the link to protect the finish of the link during the chain bending.

2. Once the chain is at the desired length, install the chain gently with the quick link as shown in diagram 4.

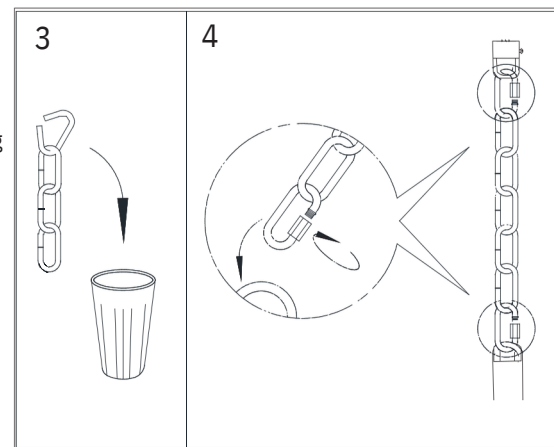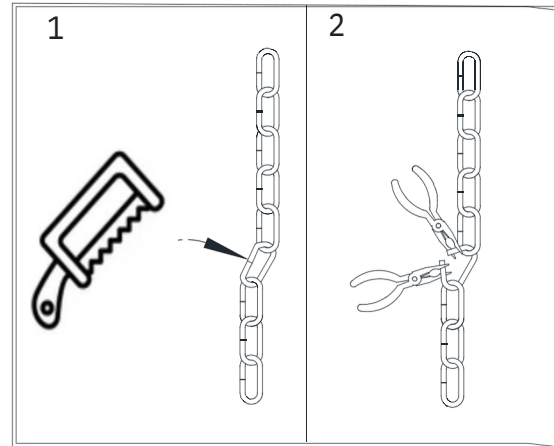

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.