



19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 60"
ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH

19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 60" ENGLISH

19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 60"

PARTS INCLUDED


- (A) Wooden Beam (not included)
- (B) Mounting Hardware (2 sets M10; for wooden beam only)
- (C) Wire Nuts (3)
- (C1) Mounting Plate (1)
- (C2) Quick Link (8mm) (1)
- (C3) Hang Straight (1)
- (C4) Canopy A (1)
- (C5) Collar (1)
- (C6) Set Bolt (1)
- (D1) Junction Box, 50lbs./22.7kg. MIN. FIXTURE RATED (not included)
- (D2) Ceiling Plate (1)
- (D3) Mounting Bolts (4 sets M6; for concrete ceiling only)
- (D4) Ceiling Box (1)
- (D5) Nut Caps (2)
- (E1) Quick Link (8mm) (1)
- (E2) Chain (8mm) (1)
- (E3) Quick Link (8mm) (1)
- (E4) Quick Link (8mm) (1)
- (F1) Chandelier Arms A (4; with main wiring and branch wiring)
- (F2) Chandelier Arms B (4; with branch wiring)
- (G) Glass Vase (1)
- (H) Bulbs (49 + 16 extra)

- (I) Safety Cable (1)
- (J) Candle Sleeves (49)
- (K) Bolts (32)
- (L) Top Distribution Box (1)
- (L1) Collar (1)
- (L2) Metal Bowl (1)
- (L3) Top Glass Bowl (1)
- (L4) Washer (1)
- (L5) Nut (1)
- (L6) Metal Knob (1)
- (M) Bottom Distribution Box (1)
- (M1) Metal Bowl (1)
- (M2) Bottom Glass Bowl (1)
- (M3) Washer (1)
- (M4) Nut (1)
- (M5) Metal Knob (1)
- (N1) Wire Nuts (20 + 4 extra)
- (N2) Heat Shrink Sleeves (20 + 4 extra)
- (N3) Bridge Wires (4)
- (N4) Pliers (not included)
- (O) Curve Metal Bars (8)
- (P) Bolts (8 + 2 extra)

TOOLS NEEDED

- Saw (1) (not included)
- Pliers (2) (not included)

REVISION 03-27-25

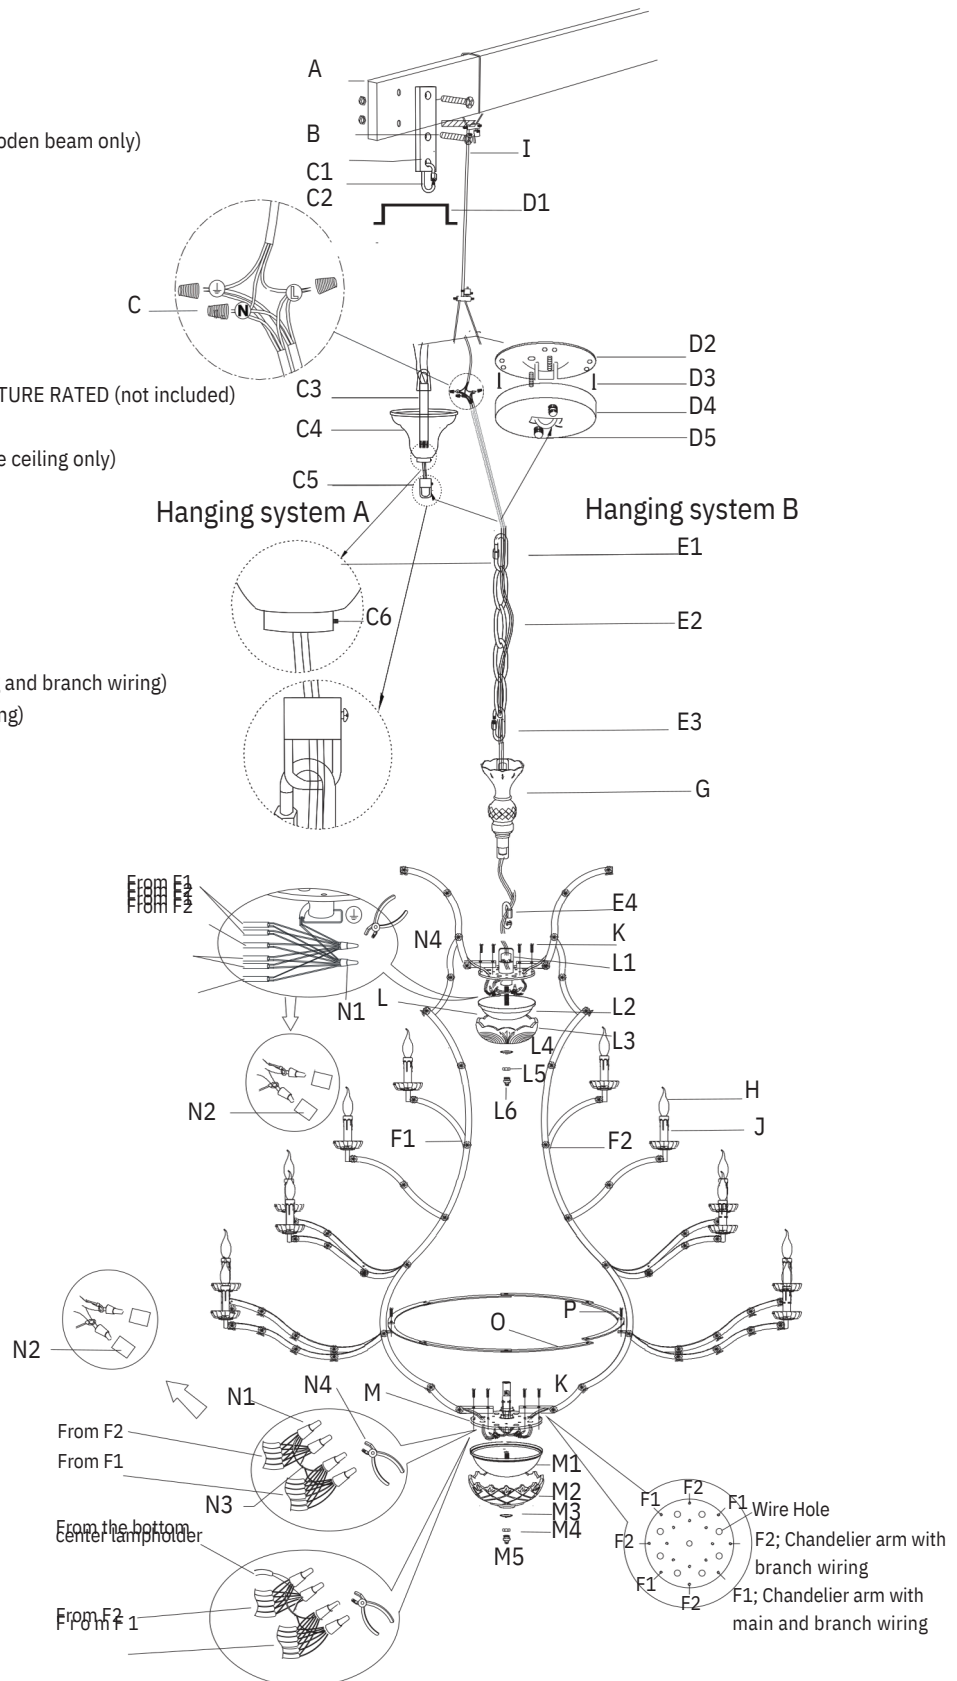

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A JUNCTION BOX (FOR HANGING SYSTEM A) OR A CONCRETE CEILING (FOR HANGING SYSTEM B). UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for forty-nine (49) 6-watt maximum E12 TYPE CA11 LED bulbs (not included), or forty-nine (49) 25-watt maximum E12 TYPE CA11 incandescent bulbs. Forty-nine 25-watt E12 TYPE CA11 incandescent bulbs are included. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture, when fixed with hanging system A, is not vaulted-ceiling compatible.

This fixture, when fixed with hanging system B, is vaulted-ceiling compatible up to a maximum ceiling slope of 15 degrees.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may be used with a forward-phase or reverse-phase dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50 lbs./22.7kg. or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when the fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD


Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE

1. Remove nut lockers A and B by loosening the set screws/bolts from the ceiling safety cable before installation.
2. Insert the ceiling safety cable through the nut lockers, as shown in the diagram below.
3. Fasten nut locker A with set screw/bolt.
4. Fasten nut locker B with set screw/bolt.

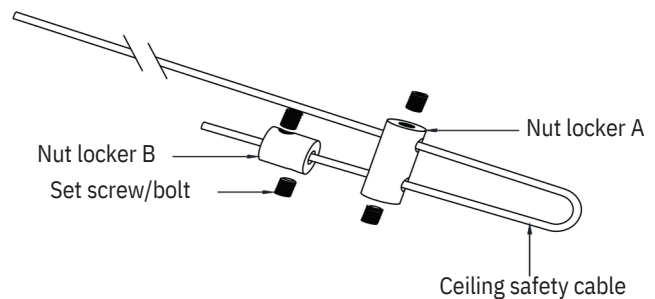

ASSEMBLY AND INSTALLATION


SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to junction box (D1) where the fixture will be installed.
3. Loosen metal knob (M5) and detach nut (M4), washer (M3), and metal bowl (M1) from bottom distribution box (M).
4. Loosen metal knob (L6) and detach nut (L5), washer (L4), and metal bowl (L2) from top distribution box (L).
5. Fix chandelier arms A (F1) and chandelier arms B (F2) opposite each other on both top distribution box (L) and bottom distribution box (M) with bolts (K).
6. Secure the curve metal bars (O) to chandelier arms A (F1) and chandelier arms B (F2) with bolts (P).
7. Insert the wires of chandelier arms A (F1) and chandelier arms B (F2) through the wiring holes of bottom distribution box (M).
8. Connect the wires of chandelier arms A (F1) and chandelier arms B (F2) with bridge wires: live/hot wire (marked with L) to live/hot wire (marked with L), neutral wire (marked with N) to neutral wire (marked with N), and secure with wire nuts (N1) and pliers (N4). Then seal the connection with heat shrink sleeves (N2) inside the bottom distribution box (M). There will be four groups of wires connected with bridge wires: Three of F1 + F2, the fourth of F1 + F2 + wires of center bottom lampholder together.
9. Insert the wires of chandelier arms A (F1) and the wires of chandelier arms B (F2) through the wiring holes of the top distribution box (L).
10. Connect the wires of the chandelier arms A (F1) and chandelier arms B (F2) with bridge wires: live/hot wire (marked with L) to live/hot wire (marked with L), neutral wire (marked with N) to neutral wire (marked with N), and secure with wire nuts (N1) and pliers (N4). Then seal the connection with heat shrink sleeves (N2) inside the bottom distribution box (M). There will be two groups of wires connected with main cable wires: F1 + F2 + F1 + F2 + main cable.
11. Re-attach the metal bowl (L2), top glass bowl (L3), washer (L4), and nut (L5) to the top distribution box (L) and fasten the metal knob (L6) to the top distribution box (L).
12. Re-attach metal bowl (M1), bottom glass bowl (M2), washer (M3), and nut (M4) to the bottom distribution box (M), then fasten metal knob (M5) to bottom distribution box (M).
13. Unlock quick link (E4) and attach glass vase (G) to collar (L1) on top of the top distribution box (L) and secure quick link (E4).
The implementation of hanging system A or B depends on whether the ceiling is vaulted or level.
14. Hanging system A is for a level ceiling and includes mounting hardware (B), mounting plate (C1), quick link (C2), hang straight (C3), canopy A (C4), and collar (C5). Loosen set bolt (C6) and remove collar (C5) from hang straight (C3). Then insert hang straight (C3) through canopy A (C4) and reattach hang straight (C3) to collar (C5) and secure with set bolt (C6).
15. Hanging system B is for vaulted and level ceilings and includes ceiling plate (D2), mounting bolts (D3), ceiling box (D4), and nut caps (D5). Loosen nut caps (D5) and remove ceiling plate (D2) from the ceiling box (D4).
16. Unlock quick link (E3) on the opposite end of chain (E2) and attach to the hang straight in glass vase (G).
17. Have a professional contractor reinforce the ceiling. Attach the safety cable (I) to ceiling beam through junction box (D1), then attach the safety cable to the fixture on the ceiling with the nut locker.
18. Hanging system A: Attach mounting plate (C1) to wooden beam (A) with mounting hardware (B). Attach hang straight (C3) to mounting plate (C1) with quick link (C2).
19. Hanging system B: Attach the ceiling plate (D2) to the ceiling with mounting bolts (D3).
20. Move the fixture body up to hang straight (C3) or ceiling plate (D2), attach the quick link (E1) to collar (C5) of hang straight (C3) or ceiling plate (D2).
21. Move canopy A (C4) or ceiling box (D4) down from the ceiling and feed the wires through the hang straight (C3) or ceiling box (D4).
22. Carefully inspect the fixture wires. One is the ground wire (marked with $\oplus$). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).
23. Connect the fixture ground wire to the power supply ground wire with a wire nut (C).
24. NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
25. Connect the fixture neutral wire to the power supply neutral wire with a wire nut (C).
26. Connect the fixture live/hot wire to the power supply live/hot wire with a wire nut (C).
27. CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
28. Move canopy A (C4) or ceiling box (D4) up to the ceiling, then fasten with set bolt (C6) or nut caps (D5).
29. Fix glass dishes (25) and candle sleeves (J) onto the bobèche on chandelier arms A and B (F1 and F2). Hang the glass drops (1-25), as seen in the illustration on the next page.
30. Fasten bulbs (H) to the lampholders.
31. Restore power to the junction box and test the fixture.
32. Assembly is complete.

CARE INSTRUCTIONS

- Do not use polishes or cleaners on the fixture.
- Wipe clean with a soft, dry cloth.



19TH C. ROCOCO IRON AND CRYSTAL ROUND CHANDELIER 60" ENGLISH

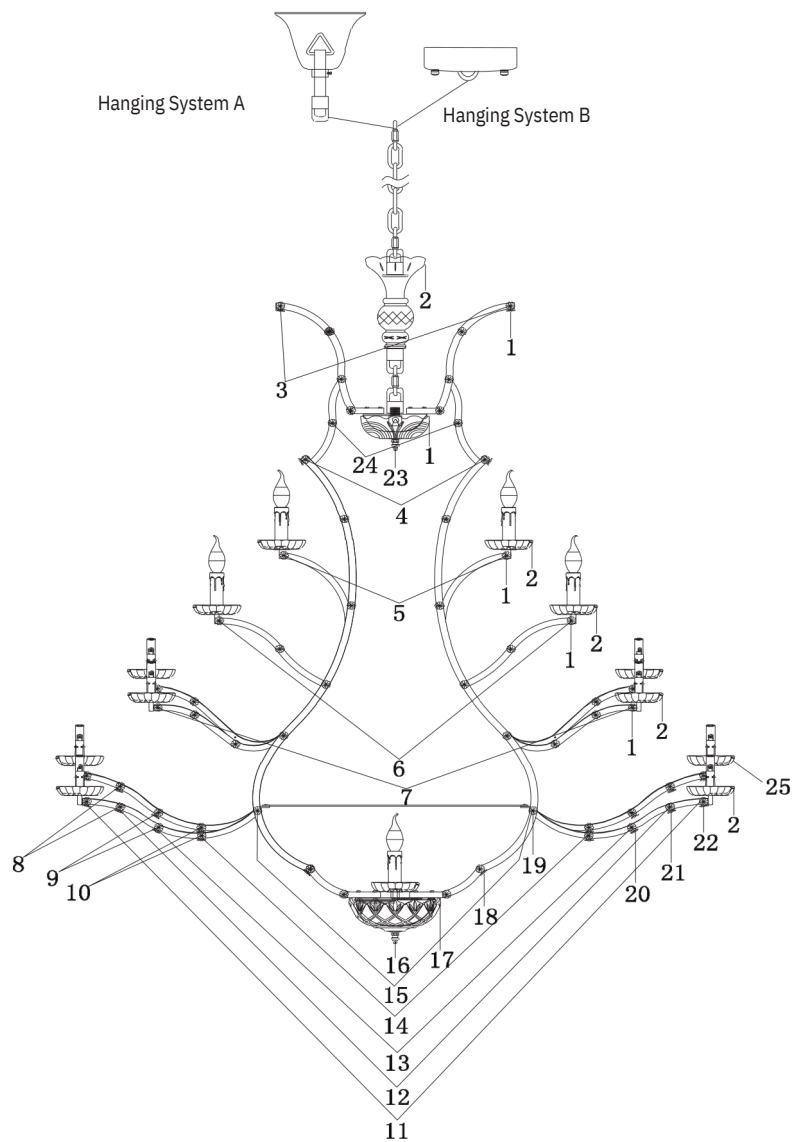

1 14mmX2PCS  63X43mm 46 PCS	2 14mmX1PC  50X38mm 198 PCS	3 14mmX13PCS  73X51mm 8 PCS	4 14mmX11PCS  63X43mm 8 PCS	5 14mmX11PCS  63X43mm 8 PCS	6 14mmX17PCS  63X43mm 8 PCS	7 14mmX15PCS  73X51mm 16 PCS	8 14mmX17PCS  73X51mm 8 PCS	
9 14mmX15PCS  73X51mm 8 PCS	10 14mmX11PCS  73X51mm 8 PCS	11 14mmX15PCS  73X51mm 16 PCS	12 14mmX19PCS  73X51mm 8 PCS	13 14mmX17PCS  73X51mm 8 PCS	14 14mmX19PCS  73X51mm 8 PCS	15 14mmX27PCS  73X51mm 8 PCS	16 14mmX9PCS  D50mm 1 PC	
17 14mmX9PCS  73X51mm 8 PCS	18 14mmX11PCS  73X51mm 8 PCS	19 14mmX13PCS  73X51mm 8 PCS	20 14mmX4PCS  73X51mm 16 PCS	21 14mmX3PCS  73X51mm 16 PCS	22 14mmX2PCS  73X51mm 16 PCS	23 14mmX4PCS  D40mm 1 PC	24 14mmX9PCS  8 PCS	25  D104XH22mm 49 PCS

HEIGHT ADJUSTMENT INSTRUCTIONS

1. Saw through the chain along a weld line, then use two pairs of pliers to gently pry the links apart along a split-line formed in each link so that a space is created large enough for the link to be removed from the remaining chain. See diagram 1, 2, and 3.
NOTE:
 - a. The chain length may be shortened from either end.
 - b. Use a clean cloth or a folded piece of paper between the pliers and the link to protect the finish of the link during the chain bending.
2. Once the chain is at the desired length, install the chain gently with the quick link as shown in diagram 4.

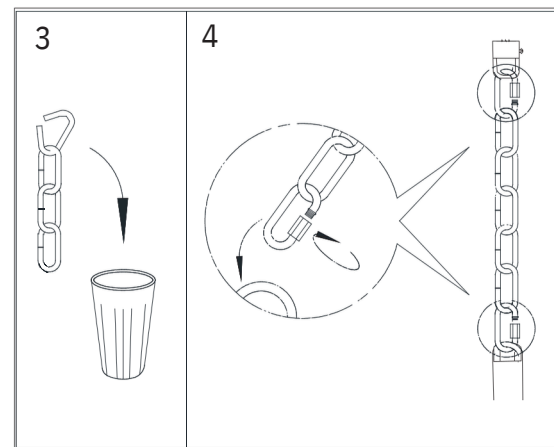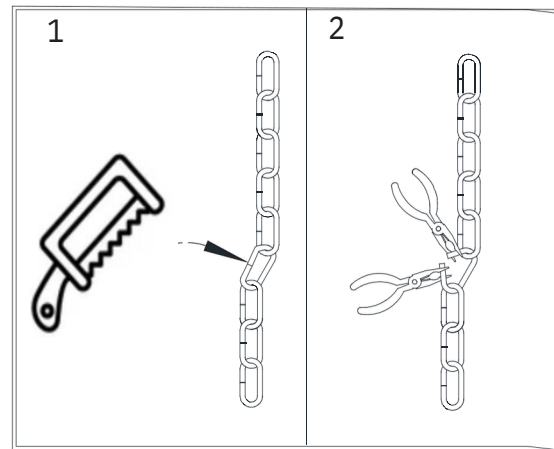

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.