



 
ANVERS TASK FLOOR LAMP

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH

ANVERS TASK FLOOR LAMP**PARTS INCLUDED**

- (A) Upper Rod (1)
- (B) Lock Knobs (2)
- (C) Leg (1)
- (D) Lamp Base (1)
- (E) Bolts (2)
- (F) Allen Wrench (1)
- (G) Adapter (1)
- (H) Dimmer Switch (1)

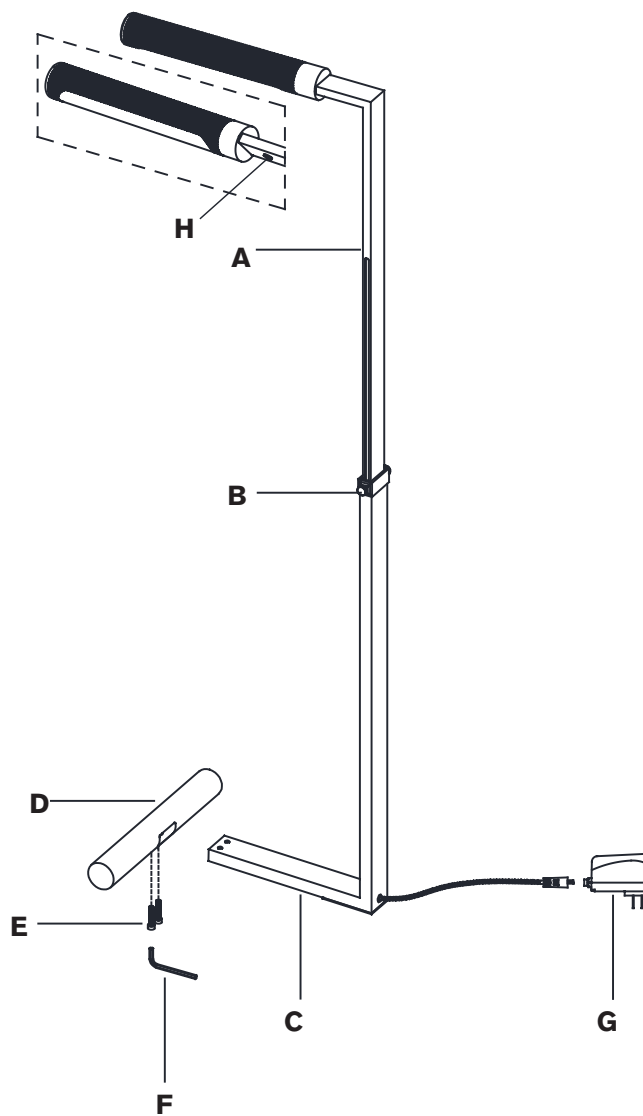

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE.

IMPORTANT SAFETY FEATURES

The LED tape is replaceable.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the lamp is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the lamp and allow it to cool prior to replacing the LED tape. Do not touch or look directly at the LED tape when the lamp is illuminated. Keep flammable materials away from lit LED tape.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information, go to www.P65Warnings.ca.gov.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Join Leg (C) to Lamp Base (D) by aligning the holes and secure with Bolts (E) using Allen Wrench (F).
3. Loosen Lock Knobs (B), adjust Upper Rod (A) to the desired height, then tighten Lock Knobs (B).
4. Connect Adapter (G) to the power cord.
5. Plug into an electrical outlet and test the lamp.
6. Assembly is complete.

TO OPERATE THE SWITCH:

1. When the lamp is unlit, simply tap Dimmer Switch (H) to turn the lamp on.
2. To adjust the brightness, tap and hold your finger on Dimmer Switch (H) and the light will begin to dim up or down. To dim the opposite way, remove your finger, then tap and hold again until the desired light level is achieved.
3. To turn the lamp off, tap Dimmer Switch (H).

CARE INSTRUCTIONS

 
 
 
Do not use polishes or cleaners on the lamp.

Wipe clean with a soft, dry cloth.

LED MODULE REPLACEMENT INSTRUCTIONS

PLEASE NOTE THAT THE LED REPLACEMENT MUST ONLY BE PERFORMED BY A LICENSED ELECTRICIAN.

1. Place the complete shade with the LED module on a solid and clean surface.
2. Unscrew the end cover by turning in a counterclockwise direction, and then take it out from the shade (Fig. 1).
3. Pull the PC diffuser out by hand carefully (Fig. 2).
4. Pull out the fixture Neutral/Hot wires from the LED module. Then, remove the LED module from the shade by unscrewing both washers and bolts (Fig. 3).
5. Place some thermal conductive silicone onto the backside of the new LED module, attach the new LED module to the shade, and secure with both washers and bolts.
6. Insert the lamp wires into the corresponding hole on the LED module.
7. Replace the end cover to the shade. Test the lamp.

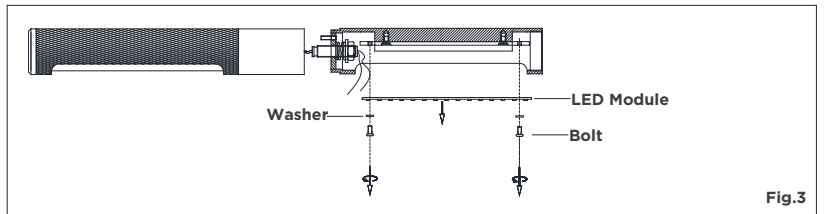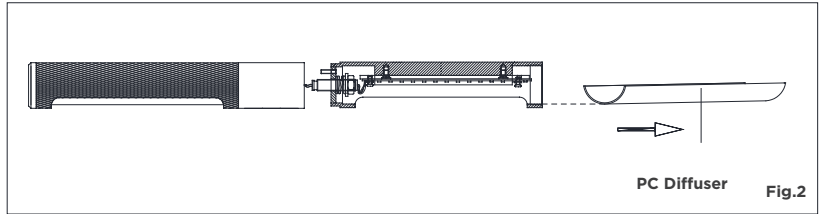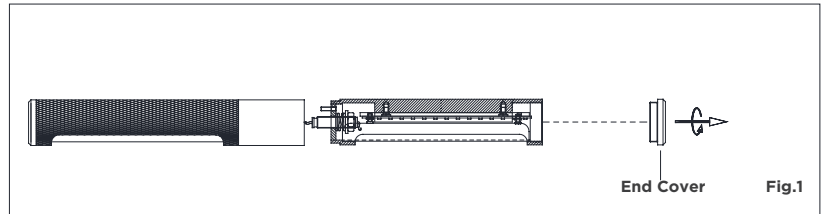

FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with
CAN ICES-005 (B) /NMB-005(B).

RH
15 KOCH ROAD
CORTE MADERA, CA 94925
1-800-762-1005