



AUDUBON ROUND CHANDELIER 40"

ASSEMBLY AND INSTALLATION INSTRUCTIONS

ENGLISH


AUDUBON ROUND CHANDELIER 40"

PARTS INCLUDED

- (A) Mounting Bracket (1)
- (B) Canopy (1)
- (C) Mounting Loops (9)
- (D) Nuts (9)
- (E) Rod Assemblies (Short) (4)
- (F) Rod Assemblies (Medium) (2)
- (G) Rod Assemblies (Long) (2)
- (H) Rod Assembly (Longest) (1)
- (I) Slotted Set Screws (18)
- (J) Shades (18)
- (K) Wire Nuts (3)
- (L) Phillips Screws (2)
- (M) Expansion Screws (16)
- (N) Safety Cable (1)

TOOLS NEEDED (NOT INCLUDED)

- Phillips Screwdriver
- Slotted Screwdriver
- Electrical Tape
- Power Drill
- Hammer
- Pencil

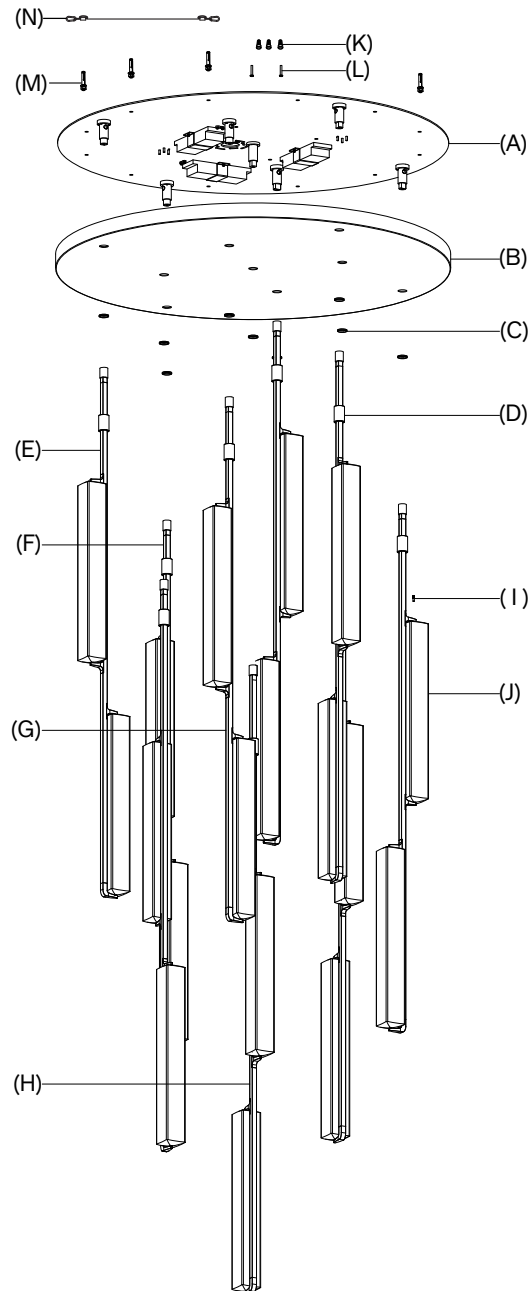

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. IF YOU ARE UNSURE ABOUT YOUR CEILING TYPE OR WHAT MOUNTING METHOD YOU SHOULD USE, CONSULT A QUALIFIED PROFESSIONAL OR YOUR LOCAL HARDWARE STORE.

INSTALLATION BY A LICENSED ELECTRICIAN IS REQUIRED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture is equipped with a non-replaceable LED board.

VAULTED CEILING COMPATIBILITY

This fixture is not compatible with a vaulted ceiling.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible, and may only be used with a forward-phase dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50lbs. or more will require additional ceiling reinforcement above the ceiling where they are to be installed. THIS FIXTURE IS SUITABLE FOR USE IN POURED CONCRETE.

WARNINGS

When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. Do not touch or look directly at the LED board when the fixture is illuminated. Keep flammable materials away from lit LED board.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Place Safety Cable (N) in a secure position inside the ceiling box.
3. Unscrew and remove Mounting Loops (C) from Mounting Bracket (A).
4. Place Mounting Bracket (A) in the desired position on the ceiling, and mark mounting holes into the ceiling using a pencil.
5. Drill holes into the locations you marked.
6. Attach Mounting Bracket (A) to the ceiling with Phillips Screws (L).
7. Insert Expansion Screws (M) into the holes drilled in Step 5. Use a hammer to tap them in to secure Mounting Bracket (A).
8. Hook Safety Cable (N) to the steel cable assembly of Mounting Bracket (A).
9. Connect the ground wire from the fixture and the drivers with the ground wire (usually bare or green) from your ceiling box using a Wire Nut (K). If your home does not have a ground wire, then attach the ground wire from the fixture to the green grounding screw inside of the outlet box. NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME IS PROPERLY GROUNDED.
10. Connect the neutral wire (white) from the fixture with the neutral wire (usually white) from the ceiling box using a Wire Nut (K).
11. Connect the hot wire (black) from the fixture with the hot wire (usually black) from the outlet box using a Wire Nut (K). NOTE: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. After wiring, wrap all Wire Nuts (K) with electrical tape to avoid loosening.
13. Attach Canopy (B) to Mounting Bracket (A) with Mounting Loops (C).
14. Align Rod Assemblies (E, F, G, and H) with Mounting Bracket (A), noting the direction of the notches. Lock each Rod Assembly (E, F, G, and H) to Mounting Bracket (A) with Nuts (D). (Insert rod assembly with label A into the connector with label A; insert rod assembly with label B into the connector with label B; insert rod assembly with label C into the connector with label C; insert rod assembly with label D into the connector with label D.)
15. Insert the holes at either ends of Shades (J) into the brackets of Rod Assemblies (E, F, G, and H) first, then secure Shades (J) from the top with Slotted Set Screws (I).
16. Assembly is complete.

HEIGHT ADJUSTMENT INSTRUCTIONS

The height of the fixture cannot be adjusted.

ATTENTION: ADJUSTING THE HANG HEIGHT

Any adjustments or alterations to the fixture, cord, or overall hang height that differ from those detailed on RH.com will void the Laboratory Listing and Approvals (UL, ETL, CSA, etc.). If the listing is voided, this means the product may no longer be safe for use as modified. RH does not recommend modifying the product.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture.

Wipe clean with a soft, dry cloth.