



BECKMAN RECTANGULAR CHANDELIER 72"

ASSEMBLY AND INSTALLATION INSTRUCTIONS
ENGLISH

BECKMAN RECTANGULAR CHANDELIER 72"

PARTS INCLUDED

(A) Mounting Plate (1) (B)

Mounting Loops (2) (C)

Canopy (1) (D) Mounting

Screws (2) (E) Canopy Rings

(2) (F) Quick Links (2) (G)

Hanging Loops (2) (H) 18"

Connection Rods (4)

(I) Connective Tubes (10)

(J) 12" Connection Rods (4)

(K) 6" Connection Rods (4)

(L) Joints (2)

(M) Hanging Frame (1)

(N) Lantern Box (1)

(O) Small Glass Panels (2)

(P) Glass Panels (2)

(Q) Metal Tabs (4)

(R) Set Screws (8)


(S) "L" Metal Tabs (4)

(T) Screws (8)

(U) Top Hooks (2)

(V) Bulbs (8)

(W) Wire Nuts (3)

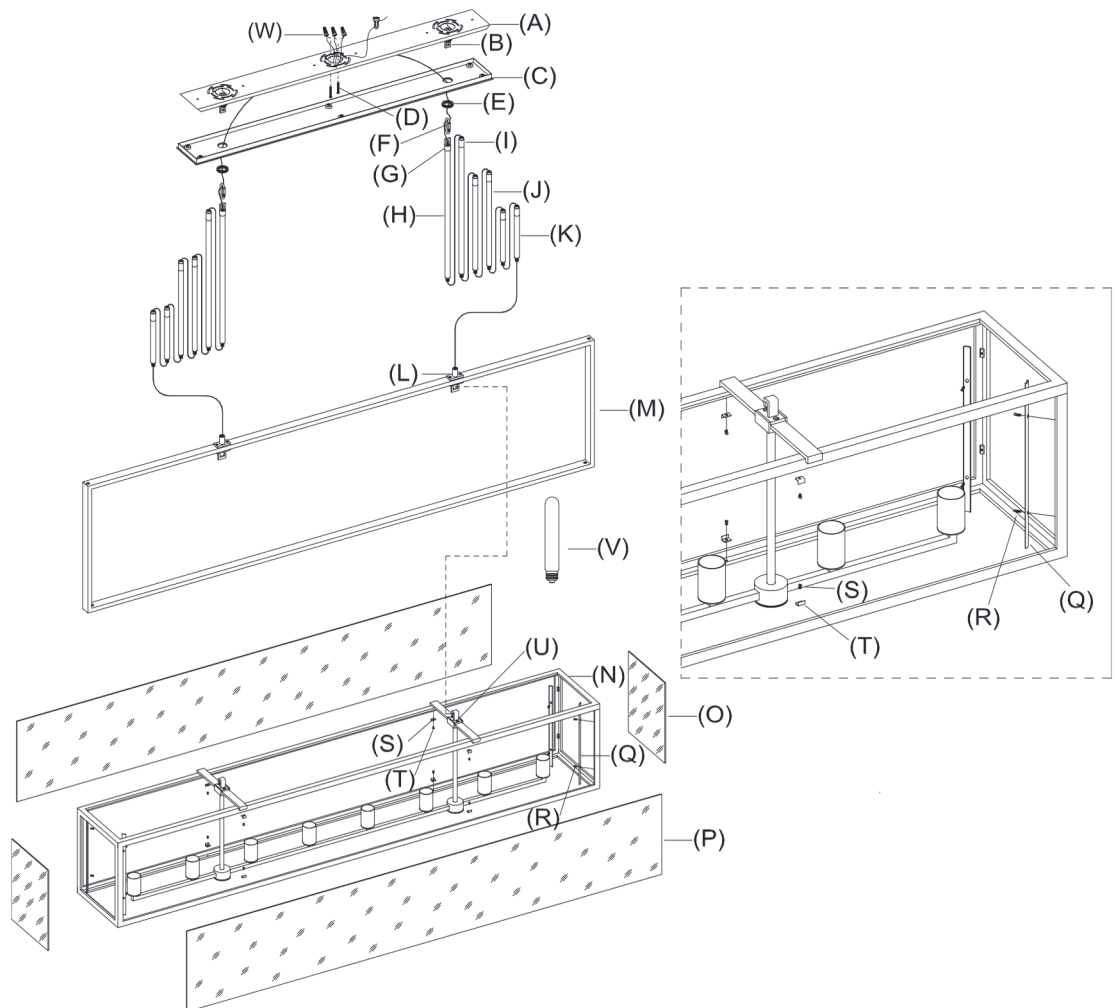

BECKMAN RECTANGULAR CHANDELIER 72" ENGLISH

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION METHODS MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for eight (8) 40-watt maximum Type T incandescent lightbulbs or eight (8) 6.5-watt maximum SLED lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is vaulted-ceiling compatible, up to a maximum ceiling slope of 20 degrees.

DIMMER-SWITCH COMPATIBILITY

This fixture is dimmer switch compatible and may be used with either a forward-phase or reverse-phase dimmer switch.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information, go to www.P65Warnings.ca.gov.


WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

INSTALL SAFETY CABLE:

1. Run safety cable through junction box and around structural member of building.
2. Wrap the safety cable around saddle (a), and secure with u-bolt (b) and hex nuts (c).

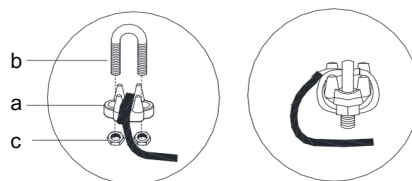

BECKMAN RECTANGULAR CHANDELIER 72" ENGLISH

ASSEMBLY AND INSTALLATION

**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM
THE FUSE BOX OR CIRCUIT BREAKER PANEL.**

1. Carefully remove all parts from the box and remove all plastic coverings. Place on a clean, soft surface.
2. Remove Metal Tabs (Q) by removing Set Screws (R) and remove "L" Metal Tabs (S) by removing Screws (T) and set aside.
3. Install Glass Panels (P) to Lantern Box (N) and secure by replacing "L" Metal Tabs (S), then tighten with Screws (T).
4. Install Small Glass Panels (O) to both sides of Lantern Box (N) and secure by replacing Metal Tabs (Q), then tighten with Set Screws (R).
5. Carefully slide Hanging Frame (M) over Lantern Box (N). Clip Top Hooks (U) onto the loops of Hanging Frame (M).
6. Determine the hanging length of the fixture. Connect Joints (L) to some or all Connection Rods (H) (J) (K) and Connective Tubes (I) according to the height needed. Note: Pre-wire the connection rods before putting them together.
7. Feed wires through Connection Rods (H) (J) (K), Hanging Loops (G), Canopy Rings (E), Canopy (C) and Mounting Loops (B).
8. Thread Hanging Loops (G) onto the inner connection rod of the top 18" Connection Rod (H).
9. Unscrew Canopy Rings (E). Slide Canopy Rings (E) and Canopy (C) onto the top 18" Connection Rod (H).
10. Attach Mounting Plate (A) to the ceiling junction box and secure with Mounting Screws (D) and other proper fasteners from your local hardware store.
11. Connect the safety cable as shown in the diagram on the previous page.
12. Gently pull the wiring from the ceiling junction box and allow the wires to hang. Thread the wires through the center hole in Mounting Plate (A).
13. Wrap fixture ground wire (bare copper) around the green grounding screw and tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using a Wire Nut (W).

NOTE: It is imperative that the fixture is grounded.

14. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using a Wire Nut (W).
15. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using a Wire Nut (W). CAUTION: Do not reverse the hot and neutral connections.
16. Tuck the wire connection neatly into the ceiling outlet box.
17. Hook Hanging Loop (G) to Mounting Loops (B) by opening and closing Quick Links (F).
18. Install Canopy (C) to Mounting Plate (A) and secure with Canopy Rings (E).
19. Install Bulbs (V) into each of the sockets.
20. Restore power to junction box and check operation of fixture.
21. Assembly is complete.