

CHIARA FLUSHMOUNT 22"


ASSEMBLY & INSTALLATION INSTRUCTIONS

UNITED STATES ENGLISH

CHIARA FLUSHMOUNT 22"

PARTS INCLUDED:

- (A) Junction Box, 50lbs/22.7kg. MIN. FIXTURE RATED (not included)
- (B) Mounting Bolts (4 sets)
- (C) Wire Nuts (3)
- (D) Ceiling Plate (1)
- (E) Fixture Body (1)
- (F) Nuts (4)
- (G) Nut Caps (4)
- (H) Bulbs (6 +2 extra)
- (I) Safety Cable (1)
- (J) Glass Drops (61 +3 extra)

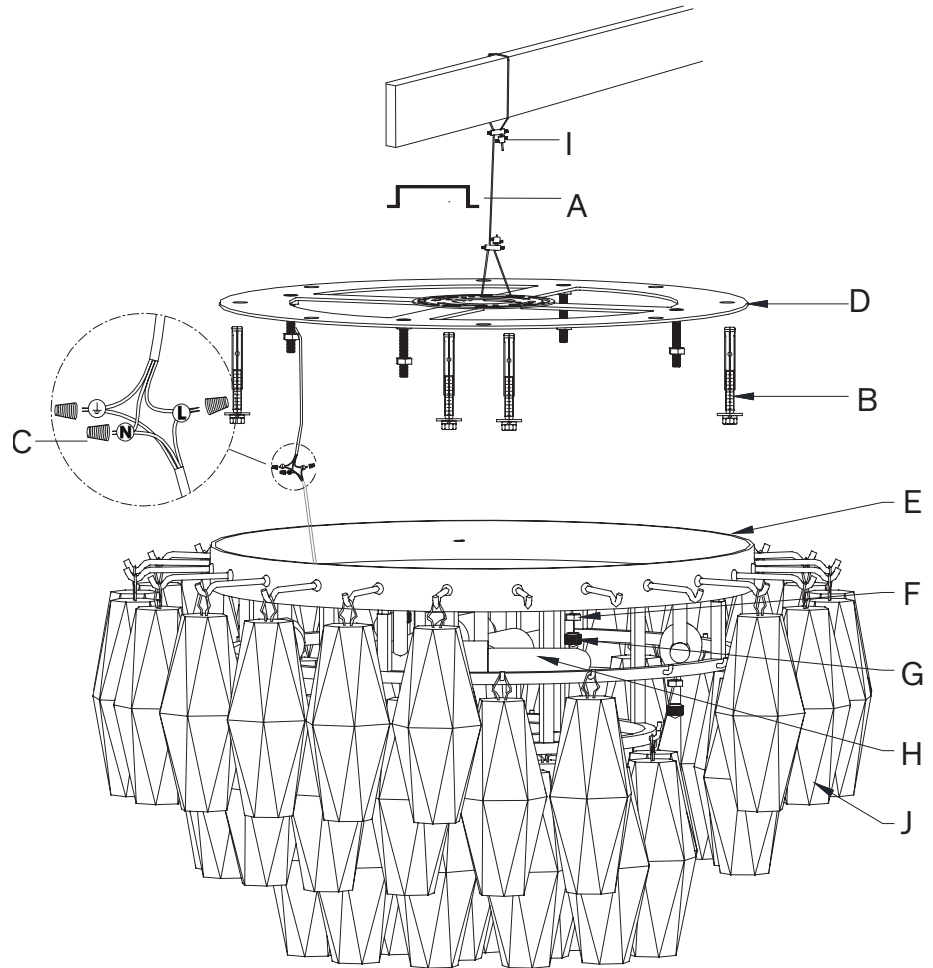

IMPORTANT: PLEASE READ

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING TO A CONCRETE CEILING. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

IMPORTANT SAFETY FEATURES

BULBS

This fixture has been rated for six (6) 25-watt maximum E12 TYPE T6 incandescent bulbs (six (6) 25-watt E12 TYPE T6 incandescent bulbs included) or six (6) 6-watt maximum E12 TYPE T6 LED bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

VAULTED CEILING COMPATIBILITY

This fixture is not vaulted-ceiling compatible.

DIMMER SWITCH COMPATIBILITY

This fixture is dimmer-switch compatible and may be used with a forward- or reverse-phase dimmer switch.

CEILING REINFORCEMENT

Fixtures weighing 50lbs/22.7kg or more will require additional reinforcement above the ceiling where they are to be installed.

WARNINGS

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when fixture is illuminated. Keep flammable materials away from lit bulbs.

WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet (91cm) away from cribs, bassinets, and toddler beds.

Keep out of reach of children under 3 years of age.

THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY AND INSTALLATION

SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Turn OFF power to junction box where the fixture will be installed.
3. Loosen the nut caps (G) and nuts (F), then remove the ceiling plate (D).
4. Have a professional contractor reinforce ceiling. Attach the safety cable (I) to the ceiling beam through the junction box (A), then attach the safety cable to the fixed fixture on the ceiling with the nut locker.
5. Attach the ceiling plate (D) to the ceiling with mounting bolts (B).
6. Carefully inspect the fixture wires. One is the ground wire (marked with $\oplus$). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L).

7. Connect the fixture ground wire to the power supply ground wire with wire nut (C).

NOTE: IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.

8. Connect the fixture neutral wire to the power supply neutral wire with wire nut (C).
9. Connect the fixture live/hot wire to the power supply live/hot wire with wire nut (C).

CAUTION: DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, AS SAFETY WILL BE COMPROMISED.

10. Attach the fixture body (E) to the ceiling plate (D), then fasten the nuts (F) and nut caps (G).
11. Fasten the bulbs (H) into the lampholders.
12. Hang the glass drops (J) starting from the inner to the outer. To ensure the balance of the fixture body (E) during glass drops installation, hang the glass drops in a balanced way on opposite sides.
13. Restore power to the junction box and fixture.
14. Assembly is complete.

CARE INSTRUCTIONS

Do not use polishes or cleaners on the fixture. Wipe clean with a soft, dry cloth.