

# GLASS GLOBE MOBILE LINEAR CHANDELIER 60"

ASSEMBLY AND INSTALLATION INSTRUCTIONS

**ENGLISH**

**GLASS GLOBE MOBILE LINEAR CHANDELIER 60"**

**PARTS INCLUDED**



- (A) Top Ceiling Plate (1)
- (B) Bottom Ceiling Plate (1)
- (C) Glass Globes (7)
- (D) Bolts (6)
- (E) Extension Rods (15)
- (F) 1.6W LED G4 Bulbs (7)

**HARDWARE INCLUDED**

- (G) Nut Wrench (1)
- Pair of Cotton Gloves

**TOOLS NEEDED (NOT INCLUDED)**

- (H) Wall Anchors (6)
- (I) Screws (6)
- Flat-head Screwdriver
- Power Drill
- Pencil

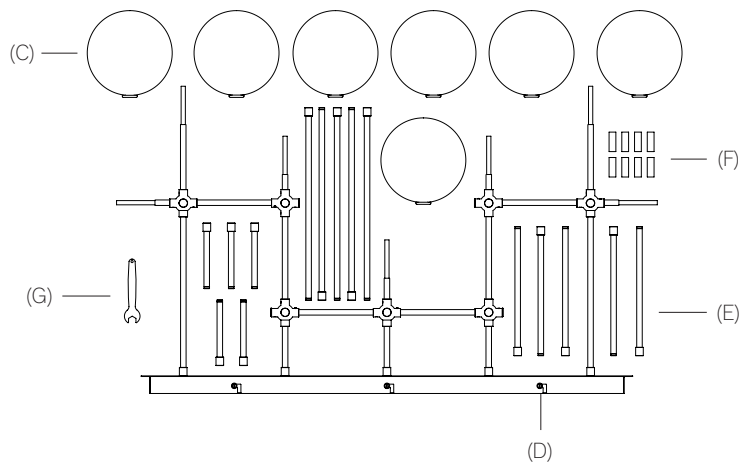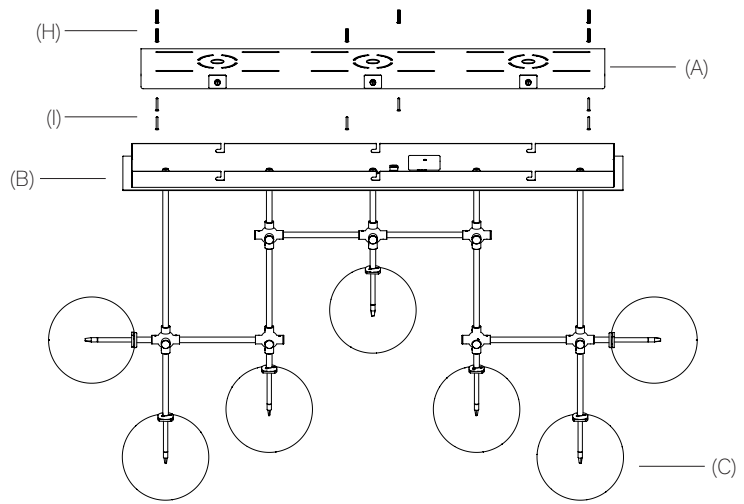

**IMPORTANT: PLEASE READ**

PLEASE FOLLOW THE ASSEMBLY INSTRUCTIONS CLOSELY. IMPROPER ASSEMBLY OR INSTALLATION CAN RESULT IN PERSONAL OR PROPERTY DAMAGE. MOUNTING HARDWARE HAS BEEN PROVIDED FOR MOUNTING DIRECTLY TO A JUNCTION BOX. UNIQUE OR ALTERNATIVE INSTALLATION TYPES MAY REQUIRE DIFFERENT MOUNTING HARDWARE, WHICH HAS NOT BEEN INCLUDED. ALWAYS CONSULT WITH A LICENSED ELECTRICIAN BEFORE INSTALLATION.

INSTALLATION BY A LICENSED ELECTRICIAN IS STRONGLY RECOMMENDED.

**IMPORTANT SAFETY FEATURES****BULBS**

This fixture has been rated for up to 7 (seven) 1.6-watt maximum Type G4 LED lightbulbs, or up to 7 (seven) 5-watt maximum incandescent lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.

**DIMMER SWITCH COMPATIBILITY**

This fixture is dimmer-switch compatible, and may only be used with an ELV/trailing-edge dimmer switch.

**WARNINGS**

All wires are connected. When unpacking, be careful not to pull wires, as damage may result. Do not connect electricity until the fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off the fixture and allow it to cool prior to replacing the lightbulbs. Do not touch or look directly at the bulbs when the fixture is illuminated. Keep flammable materials away from lit bulbs.


**WARNING: STRANGULATION HAZARD**




Keep cord at least 3 feet away from cribs, bassinets, and toddler beds. Keep out of reach of children under 3 years of age.



**THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.**


**SAFETY PRECAUTION WHILE INSTALLING AND USING LIGHTING FIXTURE:**


The manufacturer (reseller) shall not be held liable for any damage caused by improper installation and operation. The installation and wiring connection must be performed by a licensed professional. All applicable regulations and norms shall be observed while installing the fixture. Make sure you cut off electrical supply at the main fuse box/circuit breaker before commencing any work.

This fixture is for indoor use only. 

Avoid mounting on wet surfaces or surfaces with high conductivity. Wires to be connected with push-in wire connectors in line with EN 60998. The connector terminal should hold safety certificates applicable in Poland and the European Union. A fixture of Class I protection  should be connected to electrical ground  with an earth conductor (green and yellow wire). A fixture of Class II protection  includes double-insulation wiring and cannot be connected to electrical ground. Make sure the wiring is not damaged during installation. Should the fixture be damaged, it should be replaced with the same type, voltage, and wattage (see label). Protect the fixture against any water or humidity contact with power supply. If the fixture is to be mounted in rooms with bathtubs/showers, electrical installation regulations for buildings shall apply.

The fixture uses irreplaceable Z-Type wires. No replacement of internal or external wiring shall be performed by users. It will always lead to irreversible modifications of intended fixture parameters and may lead to improper operation and risk to the user.  Class II protection (with safety insulation) – electrical ground (yellow and green wire) must not be connected.  Class I protection – light fixture must be connected to electrical ground wire with an earth conductor (green and yellow wire). Fixtures to be used indoor in temperatures at about 25°C.

Do not touch 

Risk of burning 

Broken glass must be replaced   

**ENVIRONMENT PROTECTION NOTE:**

Used electrical appliances are recyclable – they cannot be disposed of with regular waste as they may contain substances that are hazardous to human health and the environment. Pursuant to the WEEE directive (Directive 2012/19/EU) applicable in the European Union, electrical and electronic equipment must be collected and treated separately.



Any user intending to dispose of this product shall be obliged to take it to the collection point for electrical and electronic equipment, such as the distributor of the equipment or any other unit providing such services.

The manufacturer (reseller) shall not be held liable for any damage or harm caused by improper operation of the fixture.

### SAFETY INSTRUCTIONS:

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of the fixture.

1. Turn off electricity at the main circuit breaker panel before beginning installation.
2. This direct wire fixture must be installed by a certified and licensed electrician. Customers should not attempt to install it on their own.
3. This fixture has been rated for up to 7 (seven) 1.6-watt maximum Type G4 LED lightbulbs, or up to 7 (seven) 5-watt maximum incandescent lightbulbs. To avoid the risk of fire, do not exceed the recommended wattage.
4. If any special control devices are used with this fixture, follow the instructions to assure full compliance with the N.E.C. requirements.
5. This fixture can be used only with an ELV/trailing-edge dimmer.
6. The mounting hook with wall anchor is not included. To select the proper type of mounting hook/wall anchor based on the material the ceiling is made of, please contact your local hardware store for assistance. If there are any questions, contact a licensed electrical contractor.

### WARNINGS

- Do not mount or unmount the glass globes if the lightbulbs or fixture is hot.
- All wires are connected. Do not remove the ceiling light from its packaging by pulling on the power cord, as a bad connection may result.
- Do not use if the light cable/cord is damaged.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off the light fixture and allow it and the globes to cool prior to replacing the lightbulbs.
- When mounting the fixture, always use the included white gloves.
- Do not touch the bulbs when the fixture is turned on. Do not look directly at lit bulbs.
- Keep flammable materials away from lit bulbs.

### FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### IC COMPLIANCE:

 
This Class B digital apparatus complies with CAN ICES-005 (B) /NMB-005(B).

RESTORATION HARDWARE  
15 KOCH ROAD  
CORTE MADERA, CA 94925  
1-800-762-1005


**ASSEMBLY AND INSTALLATION**

**SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE FUSE BOX OR CIRCUIT BREAKER PANEL.**


1. After removing the fixture frame from the box, use a Flat-head Screwdriver (not included) to unscrew Bolts (D) attached to both Top and Bottom Ceiling Plates (A and B). NOTE: This is a heavy element. Handle with care.



 
2. Place Top Ceiling Plate (A) flush against the ceiling, and pull the electrical cords through the hole. Mark 6 spots for Wall Anchors (H) (not included) with a pencil. Drill holes into the spots you marked, and insert Wall Anchors (H). NOTE: Consult your local hardware store for proper Wall Anchors (H).



 
3. Pull the wires protruding from the ceiling through both Top and Bottom Ceiling Plates (A and B) and secure with Screws (I) (not included).



 4. Are you installing Extension Rods (E)?  
 YES: Continue to Step 5.  
 NO: Jump to Step 9.



 5. Disconnect the fixture cords by lifting the Levers on the terminal and pulling out the cords.





6. Use Nut Wrench (G) to unscrew the 5 (five) nuts holding Bottom Ceiling Plate (B) to the fixture rod.




7. After removing Bottom Ceiling Plate (B), unscrew the threaded ends from the fixture rods. Carefully pull the electrical wires through the selected Extension Rods (E). NOTE: Ensure Extension Rods (E) are positioned with the wider part pointing up. Screw the threaded ends on top of Extension Rods (E).

  
Threaded end




8. Pull the cords through Bottom Ceiling Plate (B) and screw it back on the fixture rod with the 5 (five) nuts removed earlier, using Nut Wrench (G). NOTE: Ensure the cord endings are not frayed. If they are, twist them back together. Connect the cords back to the transformer terminal. (See Step 5 for reference.)

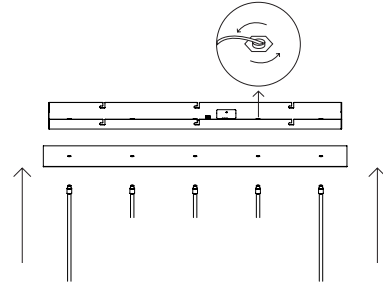

 
9. Lift the fixture up and hold it under Top Ceiling Plate (A) to make electrical connections. NOTE: It is recommended that 2 (two) people assist for this step, and the the following 3 (three) steps.




10. Junction boxes may vary depending on location. The diagram on the right shows the most common markings and manner of connecting the cords. NOTE: We recommend installation by a licensed electrician.

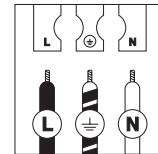

 
11. Lift up Bottom Ceiling Plate (B) so that it is flush with Top Ceiling Plate (A), and line up the bolt holes. Use a Flat-head Screwdriver to secure Bolts (D).



 
12. Carefully insert the included 1.6W LED G4 Bulbs (F) into slots at the tips of each arm.



 
13. Start mounting Glass Globes (C) from the top arm downwards, first by removing the plastic stopper from Glass Globe (C) to be mounted. NOTE: Included Cotton Gloves must be worn when handling Glass Globes (C).



14. Slide Glass Globes (C) onto the bulb tips and screw them on by first gently turning them counterclockwise until you hear a click, and then turn them clockwise. Make sure Glass Globes (C) turn straight onto the threads.

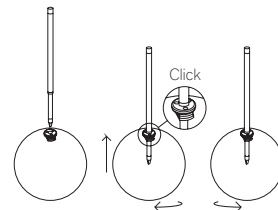

15. Restore power to the fixture. Assembly is complete.

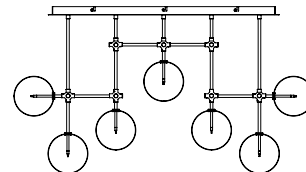

## CLEANING AND MAINTENANCE

**NOTE: ENSURE TO CUT OFF ELECTRICAL SUPPLY TO THE FIXTURE BEFORE COMMENCING CLEANING OPERATIONS.**

**BRASS FRAME:** Clean every month using a soft cloth, dampened slightly with water. Make sure the frame is dry before switching it back on. Tools: Soft cloth, water.

**GLASS GLOBES:** Clean regularly with a soft, dry cloth. Clean only the outside of the globe. When dirtier, use a wet cloth first. Grease can be cleaned with a gentle glass cleaner. Tools: Soft cloth, cotton gloves.

**LED BULBS:** Make sure your power supply is off before changing the bulb. Unscrew the globe where the bulb needs replacing. Gently remove the bulb by pulling it out and replace with an LED bulb of the same parameters. Tools: Cotton gloves, LED bulbs.

**NOTE: PLEASE REMEMBER SOLID BRASS MAY TARNISH OVER TIME. THIS IS A NATURAL PROCESS. ENSURE TO FOLLOW THE GUIDELINES TO PRESERVE THE LOOK OF THE FIXTURE FINISH.**

## TROUBLESHOOTING

**NOTE: THE HANDMADE NATURE OF THE PRODUCT OFFERS A UNIQUE AESTHETIC EXPERIENCE AND ALLOWS FOR SMALL IMPERFECTIONS, WHICH IS INHERENT IN CRAFTS. IF SOLUTIONS OFFERED BELOW ARE NOT SUFFICIENT, PLEASE DO NOT HESITATE AND CONTACT RH CUSTOMER SERVICE.**

### **PROBLEM: TARNISHING**

Oxidation of brass is a natural process. Although it is lacquered, its color may change slightly over time. No action is necessary apart from regular cleaning. See the CLEANING AND MAINTENANCE section above.

### **PROBLEM: NOISE**

The humming noise normally comes from transformers. Check electrical connections and make sure the right dimmer is used – ELV.

### **PROBLEM: GLOBE DEFORMATIONS**

Mouth-formed glass globes are unique and imperfect. The process leaves a slight deformation at the bottom of the globe. No action is necessary. All globes undergo a quality check. Should you have any concerns, please contact RH customer service.